SONY

3-213-437-13(2)

Model:
KDL-37M3000
Serie:

LCD Digital Color TV

Operating Instructions

KDL-26M3000 KDL-26ML130
KDL-32M3000 KDL-32ML130
KDL-37M3000

BRAVIA

© 2007 Sony Corporation

Owner's Record

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

_____

Serial No.

_____

WARNING

To reduce the risk of fire or electric shock, do not expose this TV to rain or moisture.

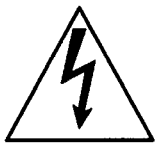

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The TV must not be exposed to dripping or splashing. Do not place objects filled with liquids, such as vases on the TV.

CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Declaration of Conformity

Trade Name: SONY
Model: KDL-26M3000/KDL-26ML130/
KDL-32M3000/KDL-32ML130/
KDL-37M3000
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Safety

- ☐ Operate the TV only on 120 V AC.
- ☐ Use the AC power cord specified by Sony and suitable for the voltage where you use it.
- ☐ The plug is designed, for safety purposes, to fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- ☐ If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified service personnel before operating it further.
- ☐ If you will not be using the TV for several days, disconnect the power by pulling the plug itself. Never pull on the cord.
- ☐ When disconnecting AC power cord, the power cord should easily accessible for disconnection.
- ☐ For details concerning safety precautions, see "Important Safety Instructions" on page 4.

Installing

- ☐ The TV should be installed near an easily accessible power outlet.
- ☐ To prevent internal heat buildup, do not block the ventilation openings.
- ☐ Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- ☐ Avoid operating the TV at temperatures below 41°F (5°C).
- ☐ If the TV is transported directly from a cold to a warm location, or if the room temperature changes suddenly, the picture may be blurred or show poor color due to moisture condensation. In this case, please wait a few hours to let the moisture evaporate before turning on the TV.
- ☐ To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the TV in a room where the floor and walls are not of a reflective material.

CAUTION

Use the following Sony TV's only with the following WALL-MOUNT BRACKET.

	Sony TV Model No.	
	KDL-26M3000 KDL-26ML130	KDL-32M3000 KDL-32ML130 KDL-37M3000
Sony Wall-Mount Bracket Model No.	SU-WL100	SU-WL500

Use with other WALL-MOUNT BRACKET may cause instability and possibly result in injury (see page 12).

To Customers

Sufficient expertise is required for installing the specified TV. Be sure to subcontract the installation to Sony dealer or licensed contractors and pay adequate attention to safety during the installation.

Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

For Customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

Contents

Important Safety Instructions 4

Welcome to the World of BRAVIA™

The Four Steps to Stunning HD Experience: Set, Sound, Source, and Setup 9

Picture Quality and Aspect Ratio 9

Getting Started

1. Installing the TV 11

Preventing the TV from Toppling Over 11

Bundling the Connecting Cables 11

Preparation for Wall-Mounting 12

2. Locating outputs and inputs 13

Left side 13

Rear 14

3. Connecting the TV 16

Cable system and/or VHF/UHF 16

HD Cable Box/HD Satellite Box 16

PC 18

Other Equipment 19

4. Setting Up the Channel List - Initial Setup 20

Basic Operations

Remote Control and TV Controls/Indicators 21

Inserting Batteries into the Remote control 21

Remote Control 21

Indicators 24

Using the TV Menus

Navigating through TV Menus 25

Menu Descriptions 25

Using the Applications Menu 26

Using the Picture Menu 28

Using the Sound Menu 28

Using the Screen Menu 29

Using the Channel Menu 30

Using the Parental Lock 31

Using the Setup Menu 35

Other Information

Troubleshooting 38

Specifications 41

Index 42

Trademark Information

Macintosh is a trademark licensed to Apple, Inc., registered in the U.S.A. and other countries.

Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.

This TV incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Blu-ray is a trademark. "BRAVIA" and BRAVIA, , and PS3 are trademarks or registered marks of Sony Corporation.

Quick Setup Guide (separate volume)
Provides a variety of optional equipment connection diagrams.

Customer Support
http://www.sony.com/tvsupport

On-line Registration
United States
http://productregistration.sony.com
Canada
http://www.SonyStyle.ca/registration

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

USE

AC power cord

Observe the followings to prevent the AC power cord from being damaged. If the AC power cord is damaged, it may result in a fire or an electric shock. Stop using it and ask your dealer or Sony Service center to exchange it.

- ☐ Do not place the TV where the power cord is subject to wear or abuse.
- ☐ Do not pinch, bend, or twist the cord excessively. The core lines may be bared and cut, and causing a short-circuit, resulting in a fire or an electric shock.
- ☐ Do not convert or damage the power cord.
- ☐ Do not allow anything to rest on or roll over the power cord.
- ☐ Do not pull the power cord.
- ☐ Do not move the TV with the power cord plugged in.
- ☐ Keep the power cord away from heat sources.
- ☐ Be sure to grasp the plug when disconnecting the power cord.

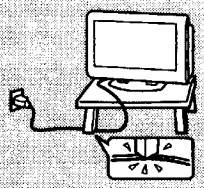

Wall outlet

Do not use a poor fitting outlet.
Insert the plug fully into the outlet. If it is loose, it may cause arcing and result in a fire.
Contact your electrician to have the outlet changed.

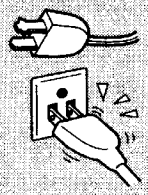

Wiring

When connecting cables, be sure to unplug the AC power cord for your safety.
Take care not to catch your feet on the cables, it may damage the TV set.

Electric shock

Do not touch the AC power cord or the TV with a wet hand. If you plug/unplug the AC power cord from the wall outlet with a wet hand, it may cause electric shock.

Lightning storms

For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the TV due to lightning and power line surges.

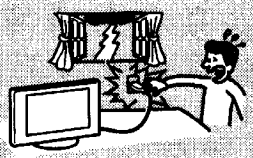

When not in use

If you will not be using the TV set for several days, the TV set should be disconnected from the AC power outlet for environmental and safety reasons. The TV set is not disconnected from the AC power source when the TV set is switched off. To disconnect the TV set completely, pull the plug from the AC power outlet. However, some TV sets may have features which need the TV set to be left in standby to work correctly. The instructions in this manual will inform you if this applies.

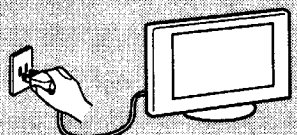

Overloading

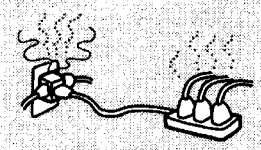

This TV set is designed to operate on a 120 V AC supply only. Take care not to connect too many appliances to the same AC power outlet as this could result in a fire or an electric shock.

Optional equipment

Do not install optional equipment too close to the TV set. Picture distortion and/or noisy sound may occur if the TV set is positioned in close proximity to any equipment emitting electromagnetic radiation.

Small accessories

Keep small accessories out of children's reach.

ANTENNAS

Outdoor antenna grounding

If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code (NEC) in the USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

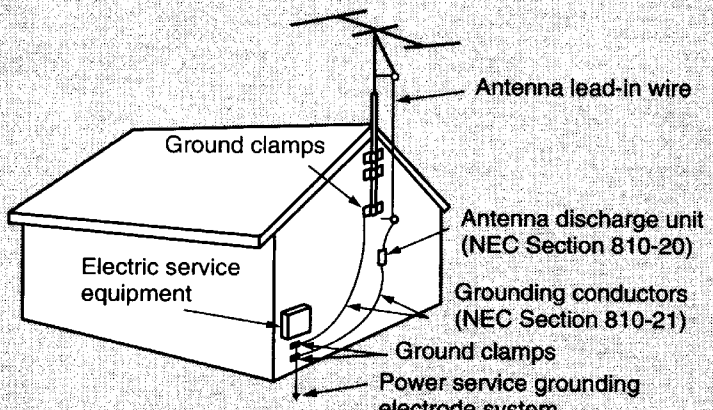

NEC: National Electrical Code

BATTERIES

- ☐ Do not dispose of batteries in a fire.
- ☐ Do not short circuit, disassemble or overheat the batteries.
- ☐ Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Disposal of used batteries

To preserve our environment, dispose of used batteries according to your local laws or regulations.

CLEANING

Cleaning the AC power plug

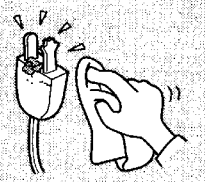

Unplug the AC power plug and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate and result in a fire.

Cleaning the screen surface/ cabinet of the TV set



Unplug the AC power cord when cleaning this TV. If not, it may result in electric shock. Clean the cabinet of the TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth. Stubborn stains may be removed with a cloth slightly dampened with a solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning. If using a chemically pretreated cloth, please follow the instruction provided on the package. The ventilation holes can accumulate dust over time. To ensure proper ventilation, we recommend removing the dust periodically (once a month) using a vacuum cleaner.

MAGNETIC INFLUENCE

This TV contains a strong magnet in the speaker unit that generates a magnetic field. Keep any items susceptible to magnetic fields away from the speaker.

SOUND

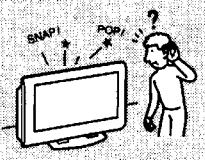

If a snapping or popping sound from the TV is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TVs to make occasional snapping or popping sounds, particularly when being turned on or off.

VENTILATION

The slots and openings in the TV are provided for necessary ventilation. To ensure reliable operation of the TV, and to protect it from overheating, these slots and openings must never be blocked or covered.

Unless proper ventilation is provided, the TV may gather dust and get dirty. For proper ventilation, observe the following:

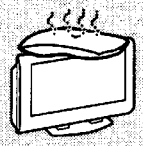

- ☐ Do not install the TV face up or down or sideways.
- ☐ Do not install the TV turned over or upside down.
- ☐ Never cover the slots and openings with a cloth or other materials.

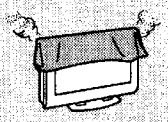

- ☐ Never block the slots and openings by placing the TV on a bed, sofa, rug or other similar surface.

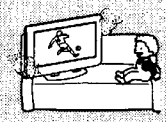

- ☐ Never place the TV in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

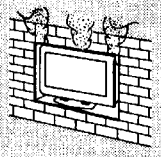

Leave some space around the TV set as shown below. Otherwise, air-circulation may be inadequate and cause overheating, which may cause a fire or damage to the TV set.

Installed on the wall

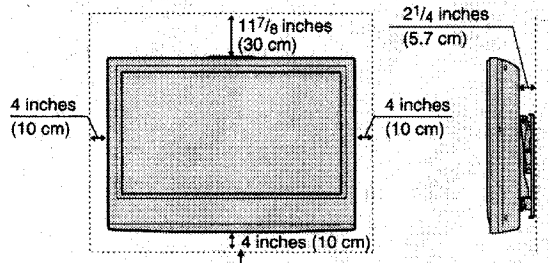

Leave at least this much space around the set.

Installed with stand

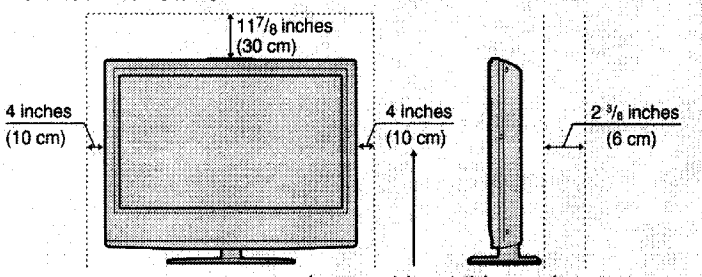

Leave at least this much space around the set.

Never install the TV as follows:

Air circulation is blocked.

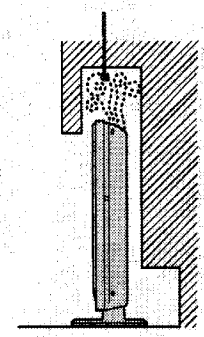

Air circulation is blocked.

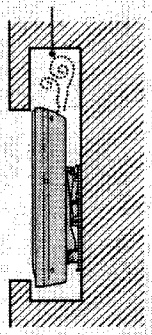

Objects and ventilation holes

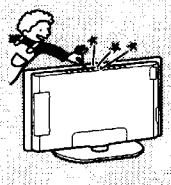

Never push objects of any kind into the TV through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or an electric shock. Do not place any objects on the TV.

MOISTURE

Moisture and flammable objects

- ☐ Do not use power-line operated TV sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc. It may result in a fire or an electric shock.

- ☐ Do not let this TV get wet. Never spill liquid of any kind on the TV. If any liquid or solid object does fall through, do not operate the TV. It may result in electric shock or damage to the TV. Have it checked immediately by qualified personnel.
- ☐ To prevent fire, keep flammable objects or open flame (e.g. candles) away from the TV.
- ☐ Do not place any objects on the TV.

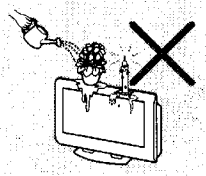

- ☐ The TV must not be exposed to dripping or splashing. Do not place objects filled with liquids, such as vases, on the TV.

CARRYING THE TV

Carry the TV in the specified manner

To avoid dropping the TV and causing serious injury, be sure to follow these guidelines:

- ☐ Before carrying the TV set, disconnect all cables.
- ☐ Carrying the large size (32/37 inches) TV requires two or more people.

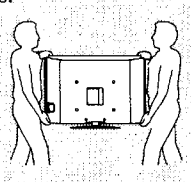

- ☐ When you carry the TV, place your hand as illustrated and hold it securely. Do not put stress on the LCD panel and the frame around the screen.
- ☐ When lifting the TV set or moving the panel, hold it firmly from the bottom. Place your palm directly under the panel
- ☐ When carrying the TV set, do not subject it to shocks or vibration, or excessive force.

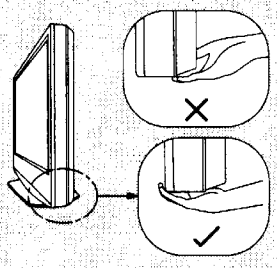

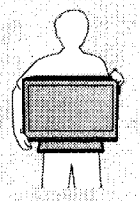

INSTALLATION

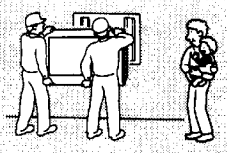

Wall mount installation requires the use of a Wall-Mount Bracket. When installing or removing the TV, using the Wall-Mount Bracket, be sure to use qualified contractors. If not properly secured during installation or removal from the Wall-Mount Bracket, the TV may fall and cause serious injury.

Optional wall mount

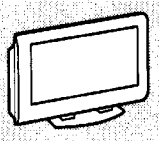

Observe the following when installing the TV using a wall-mount bracket. If the TV is not secured properly, it may fall and cause injury.

- ☐ Be sure to follow the operating instructions supplied with the wall-mount bracket when installing the TV.
- ☐ Be sure to attach the brackets supplied with the wall-mount bracket.
- ☐ Do not hang the TV from the ceiling. It may fall and cause serious injury.

Placement for viewing

It is recommended to watch the TV at a distance of 3 - 7 times that of the screen height, and in moderate brightness. Watching the TV for too long or in a dark room may cause eye fatigue. To obtain a clear picture, do not expose the screen to direct illumination or direct sunlight. If possible, use spot lighting directed down from the ceiling.

Placement

The TV should be installed near an easily accessible AC power outlet.

Observe the following in placing the TV. Otherwise the TV may fall from the stand or wall mount, causing damage or serious injury.

- ☐ Place the TV on a stable, level surface.
- ☐ Do not hang anything on the TV. Do not allow children to climb on the TV.

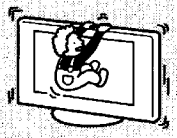

Do not install the TV in places subject to extreme temperatures, such as in direct sunlight, near a radiator, or near a heating vent. If the TV is exposed to extreme temperature, the TV may overheat and cause deformation of the enclosure or cause the TV to malfunction. Do not install the TV in a place exposed to direct air conditioning. If the TV is installed in such a location, moisture may condense inside and may cause a malfunction.

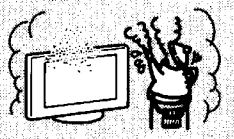

- ☐ Never place the TV in hot, oily, humid or excessively dusty places.
- ☐ Do not install the TV where insects may enter.
- ☐ Do not install the TV where it may be exposed to mechanical vibration.
- ☐ Do not install the TV in a location where it may protrude, such as on or behind a pillar, or where you might bump your head on it. Otherwise, it may result in injury.

Outdoor use

Do not install this TV outdoors. If the TV is exposed to rain, it may result in a fire or an electric shock. Do not expose the TV to direct sunlight, it may heat up and become damaged.

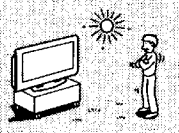

Vehicle, ships and other vessels

Do not install this TV in a vehicle. Bumping of the vehicle may cause the TV to fall down and cause injury.



Do not install this TV in a ship or vessel. If the TV is exposed to seawater, it may cause a fire or damage the TV and also shorten the life of the TV.

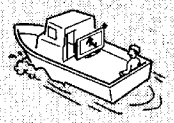

Corrosion

If you use this TV near the seashore, salt may corrode metal parts of the TV and cause internal damage or fire; it may also shorten the life of the TV.

Oils

Do not install this TV in restaurants where oily vapors occur. Dust absorbing oil may enter and damage the TV.

Medical institution

Do not place this TV in a place where medical equipment is in use. It may cause a malfunction of medical equipment.

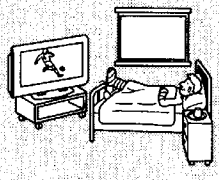

Preventing the TV from toppling over

Take measures to prevent the TV from toppling over and causing injury. To prevent the TV from toppling over, secure the TV to a wall or stand.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

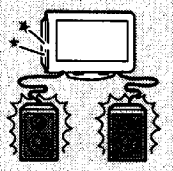

VOLUME ADJUSTMENT

- ☐ Adjust the volume so as not to trouble your neighbors. Sound carries very easily at night. Therefore, closing the windows or using headphones is suggested.
- ☐ When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result.

LCD SCREEN

- ☐ Although the LCD screen is made with high-precision technology and has effective pixels of 99.99% or more, black dots or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
- ☐ The LCD screen is made with high-precision technology and to achieve a high level of performance and picture quality, this TV's backlight setting is set to maximize the brightness of the TV. However, uneven brightness may be observed when the LCD TV is viewed in a dark ambient without an input source or blank screen. This condition is normal and not a malfunction of the TV. Changing the Picture mode, Backlight setting, or enabling the Light Sensor, will improve this condition.
- ☐ Do not expose the LCD screen surface to direct sun light. Doing so may damage the LCD panel.
- ☐ Do not push or scratch the LCD screen, or place objects on top of the TV. The image may be uneven or the LCD panel may be damaged.
- ☐ If the TV is used in a cold place, a smear may occur in the picture or the picture may become dark. This does not indicate a failure. These phenomenon improve as the temperature rises.
- ☐ Ghosting may occur when still pictures are displayed continuously. It should disappear after a few moments.
- ☐ The screen and cabinet get warm when the TV is in use. This is not a malfunction.
- ☐ Avoid spraying insect repellent with volatile material on the screen.
- ☐ Avoid prolonged contact with rubber or plastic made material.

Broken pieces

Do not throw anything at the TV.
The screen glass may break by the impact and cause serious injury.

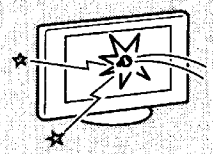

If the surface of the TV cracks, do not touch it until you have unplugged the AC power cord.
Otherwise electric shock may result.

Handling of broken glass and liquid crystal leakage

If the LCD panel gets damaged, crystalline liquid leakage may occur, or scattered broken glass may result. Do not touch broken glass or crystalline liquid (which is toxic), with bare hands as cuts, poisoning or skin irritation may occur. Also, do not let glass fragments or leaked crystalline liquid get into your eyes or mouth. Should either contact your eyes or mouth, rinse the contacted area thoroughly with water and consult your doctor.

SERVICING

Do not attempt to service the TV yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician certifies in writing that he/she has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in a fire, an electric shock or other hazards.

Safety check

Upon completion of any service or repairs to the TV, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the TV is in safe operating condition, and to so certify.

Should the TV not be repairable, ask a qualified service technician to dispose of the TV.

For Customers in the United States

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance (www.eiae.org).

Welcome to the World of BRAVIA™

Thank you for purchasing this Sony BRAVIA™ high-definition television. The quality of the image you see on your BRAVIA TV is only as good as the quality of the signal it receives. To experience the stunning detail of your new BRAVIA TV, you need access to HD programming. Your BRAVIA TV can receive and display HD programming from:

- Over-the-air broadcasting via HD-quality antenna
- HD cable subscription
- HD satellite subscription
- Blu-ray Disc™ player or other external equipment

Contact your cable or satellite provider for information on upgrading to HD programming.

To learn more about HDTV, visit: http://www.sony.com/HDTV

The Four Steps to Stunning HD Experience: Set, Sound, Source, and Setup

Along with your BRAVIA TV **set**, a complete HD system requires an HD **sound** system, a **source** of HD programming and proper **setup** connections. This manual explains basic setup connections (see page 16). The Quick Setup Guide, enclosed separately, illustrates how to connect other optional equipment.

Picture Quality and Aspect Ratio

You can enjoy crisp, clear images, smooth movement and high-impact visuals from 1080i HD signals. When you compare a high-definition signal to a standard analog signal, you will notice a big difference. The 1080i HD signals provide more than twice the vertical resolution of the standard TV signal.

High-definition and standard-definition signals are transmitted with different aspect ratios (the width-to-height ratio of the image). HDTV uses a wider screen than conventional standard-definition TV.

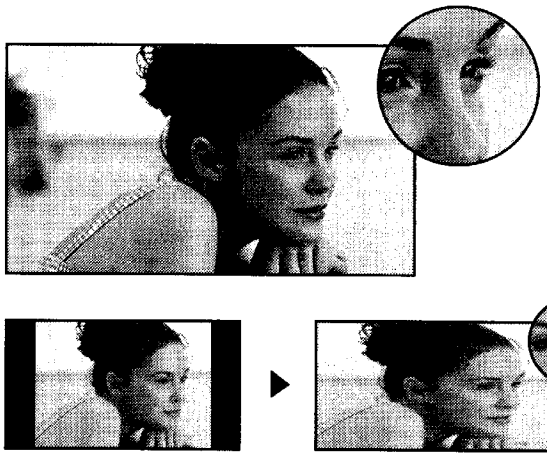

16:9 (high-definition) source

Most HDTV signals use a wide screen aspect ratio of 16:9. The 16:9 fills your BRAVIA screen and maintains a crisp, clear, vivid picture.

4:3 (standard-definition) source

Most standard-definition signals use a boxy 4:3 aspect ratio. When a 4:3 image is displayed on an HDTV, you will see black bars on the sides. The picture quality may not be as sharp as with HD sources.

- You can use the **Wide Mode** function of the TV to adjust the 4:3 image to fit the entire screen (see pages 23 and 29).
- This TV supports signals up to 1080i.

1. Installing the TV

- The Table-Top Stand for this product is packaged separately (for models KDL-26M3000/KDL-26ML130/ KDL-37M3000). To install the TV unit to the Table-Top Stand before the connection and setup, refer to the Table-Top Stand instructions (supplied with the TV set).

Preventing the TV from Toppling Over

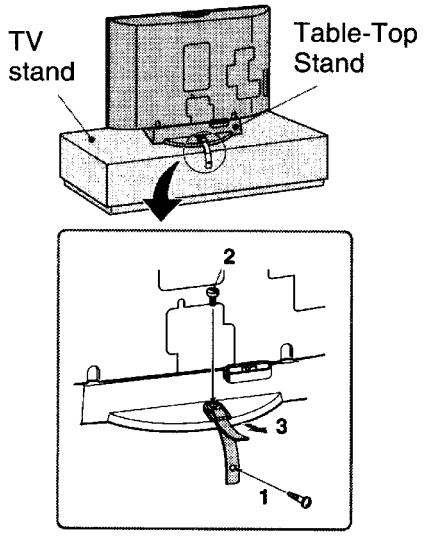

1 Screw the support belt (supplied) to the TV stand (not supplied) with a wood screw (supplied).

2 Attach the support belt to the Table-Top Stand with the securing screw (supplied) using a coin, etc.

3 Adjust the length by pulling the support belt toward you while holding the Table-Top Stand.

- Be sure to take measures to prevent the TV from toppling over and causing injury.
- The supplied wood screw may not be used depending on the type of TV stand. In this case, or when the securing strength is not enough, use commercial screws 1/8 to 3/16 inch (3 to 4 mm) diameter to fit to the TV stand. Consult your dealer about the types of screw(s).

Bundling the Connecting Cables

You can bundle the connecting cables as illustrated below.

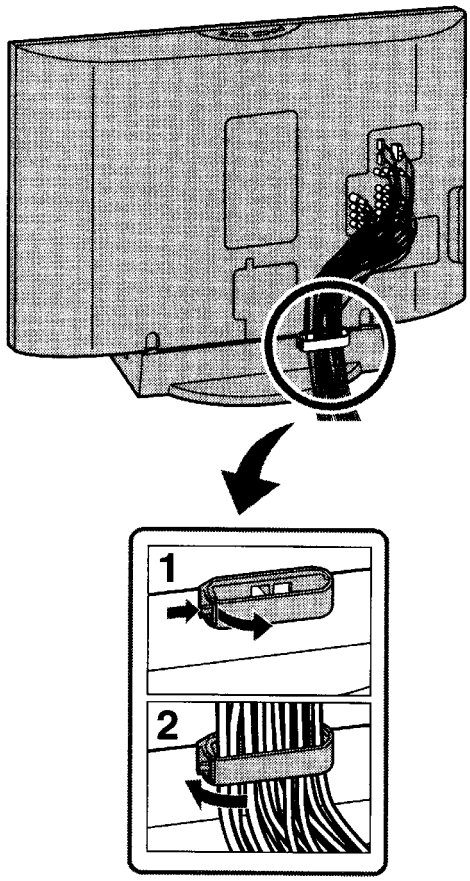

- Do not bundle the AC power cord with other connecting cables.

Preparation for Wall-Mounting

This TV can be installed on a wall by using a Wall-Mount Bracket (sold separately). Before mounting the TV on a wall, the Table-Top Stand must be removed from the TV.

- Do not remove the Table-Top Stand for any reason other than to wall-mount the TV.

Follow the simple steps below to remove the Table-Top Stand:

1. Disconnect all the cables from the TV.
2. Gently lay the TV, face down, onto a level and stable surface covered with a thick and soft cloth. Make sure the Table-Top Stand is hanging over the edge.
3. Remove the screws as shown in the illustration for your model and pull the Table-Top Stand out.
4. Do not remove any other screws from the TV.

- Be sure to store the removed screws and Table-Top Stand in a safe place until you are ready to reattach the Table-Top Stand. Keep the screws away from small children.
- For bracket installation, refer to the Wall-Mount insert (supplied in the accesories) and the instruction guide provided by the Wall-Mount Bracket model for your TV. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- **For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and the wall-mounting of your TV should be performed by a Sony dealer or licensed contractor.**

Use the following Sony TV's only with the following WALL-MOUNT BRACKET.

	Sony TV Model No.	
	KDL-26M3000 KDL-26ML130	KDL-32M3000 KDL-32ML130 KDL-37M3000
Sony Wall-Mount Bracket Model No.	SU-WL100	SU-WL500

- Use with other WALL-MOUNT BRACKET may cause instability and possibly result in injury.

Model: KDL-26M3000
KDL-26ML130
KDL-32M3000
KDL-32ML130
Remove 3 designated screws only.

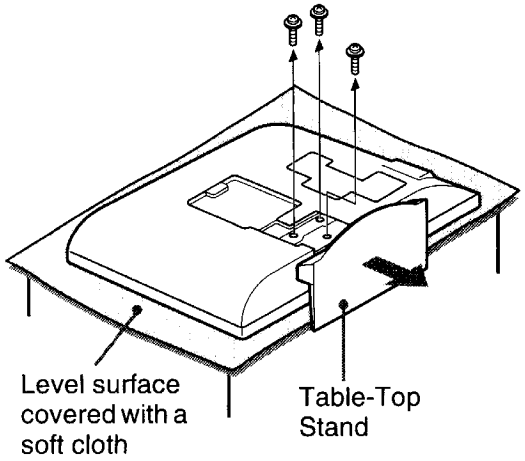

Model: KDL-37M3000
Remove 4 designated screws only.

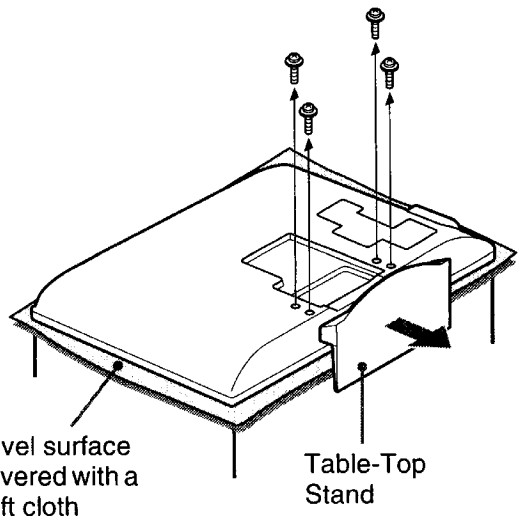

2. Locating outputs and inputs

Left side

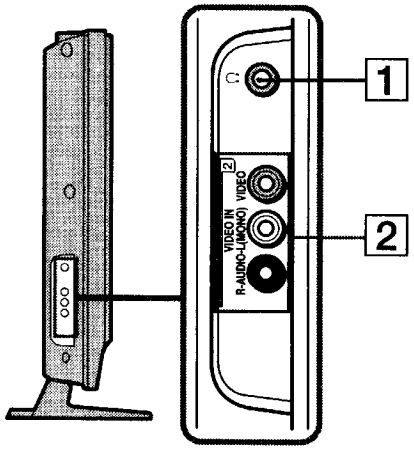

Item		Description
1	**Headphones jack**	Connects to your headphones. If your headphones do not match the jack, use a suitable plug adapter (not supplied). ✍ • While headphones are connected, the TV speakers are muted.
2	**VIDEO IN 2 VIDEO/ L (MONO)- R AUDIO**	Connects to the composite video and audio output jacks on your camcorder or other video equipment such as a VCR or video game equipment. ✍ • If you have mono equipment, connect its audio output jack to the TV's L (MONO) audio input jack.

Rear

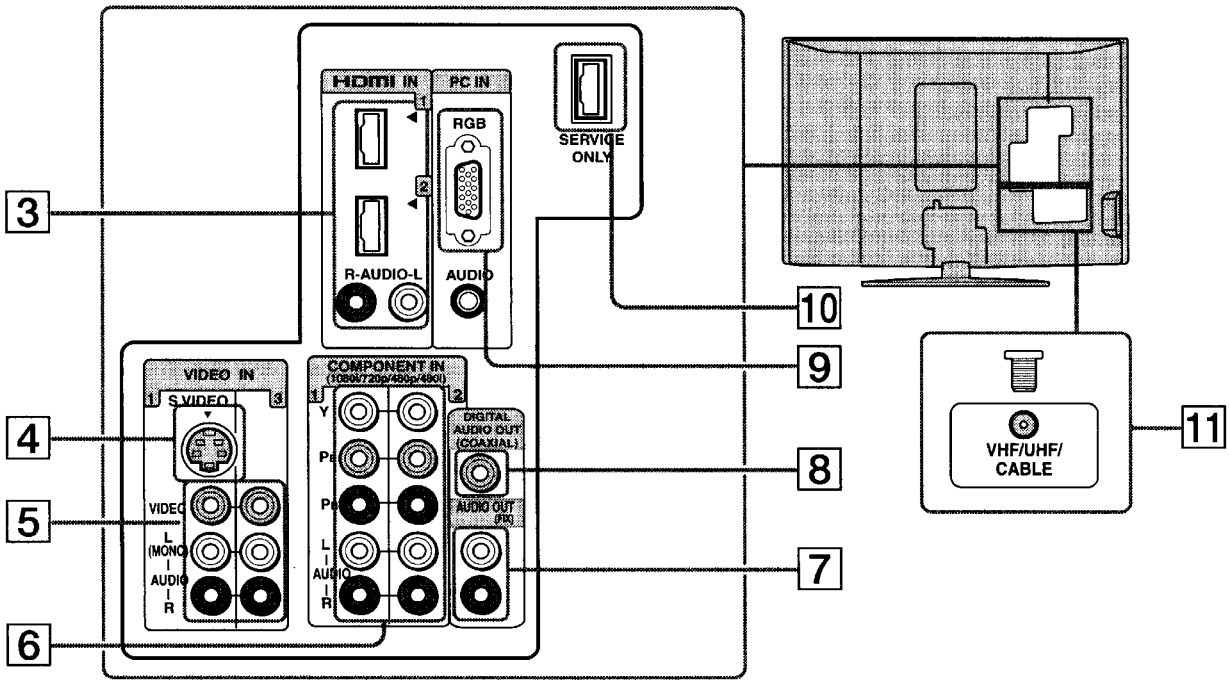

Item	Description
3 **HDMI IN 1/2 R-AUDIO-L**	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped audio/video equipment, such as DVD player, a set-top box, A/V receiver and Blu-ray disc player as well as PC. HDMI supports enhanced or high definition video plus digital audio. • If the equipment has a DVI and not a HDMI connector, use a HDMI to DVI cable or adapter to connect the DVI output to either HDMI IN 1 or HDMI IN 2 input, and connect the audio jacks to the AUDIO (L/R) jacks below the HDMI IN 2. (DVI connector is for video signals only, the Audio jacks provide support for the audio.)
4 **VIDEO IN 1 S VIDEO**	Connects to the S VIDEO output jack of your VCR or other video equipment that has S VIDEO. S VIDEO provides better picture quality than composite video (5). S VIDEO does not provide sound, you need to connect the audio cables.
5 **VIDEO IN 1/3 VIDEO/ L(MONO)- AUDIO-R**	Connect to the composite video and audio output jacks on your A/V equipment such as a VCR or other video equipment. A third composite video and audio (VIDEO IN 2) input is located on the left side panel of the TV.

HDMI-to-DVI cable

HDMI-to-DVI adapter


Audio cable

• For better PC view, use the PC IN (RGB IN) input.
• HDMI connection is necessary to view 480i, 480p, 720p, and 1080i formats. Note that this TV displays all video input signals in a resolution of 1,366 dots × 768 lines.

Item		Description
6	**COMPONENT IN (1080i/720p/480p/480i)/ L-AUDIO-R**	Connect to your DVD player's or digital set-top box's component video (YP_BP_R) and audio (L/R) jacks. Component video provides better picture quality than the S VIDEO (4) or the composite video (5) connections.
7	**AUDIO OUT (FIX)**	Connect to the left and right audio input jacks of your audio or video equipment. You can use these outputs to listen to your TV's audio through your stereo system.
8	**DIGITAL AUDIO OUT (COAXIAL)**	Connects to the coaxial audio input of a digital audio equipment that is PCM/Dolby Digital compatible.
9	**PC IN (RGB/AUDIO)**	Connect to a personal computer's video output connector using HD15-HD15 cable (analog RGB, not supplied). See **PC Input Signal Reference Chart** on page 18 for the signals that can be displayed. ✍ • For some Apple Macintosh computers, it may be necessary to use an adapter (not supplied). If this is the case, connect the adapter to the computer before connecting the HD15-HD15 cable.
10	**SERVICE ONLY**	This USB port is for service only.
11	**VHF/UHF/ CABLE**	RF input that connects to your Cable or VHF/UHF antenna.

✍

• Component video (YP_BP_R) or HDMI connection are necessary to view 480i, 480p, 720p, and 1080i formats. Note that this TV displays all format types of picture in its native resolution of 1,366 dots × 768 lines.

3. Connecting the TV

Cable system and/or VHF/UHF

Cable or VHF/UHF (or VHF only)

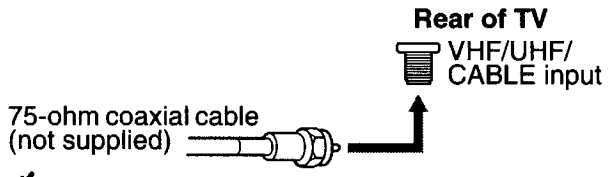

- It is strongly recommended that you connect the antenna/cable input using a 75-ohm coaxial cable (not supplied) to receive optimum picture quality. A 300-ohm twin lead cable can be easily affected by radio frequency interference, resulting in signal degradation.

Cable and VHF/UHF (or VHF only)

If you want to watch both cable and antenna (over-the-air) programming, you will need to use an optional A-B RF Switch (not supplied) to switch between the cable and over-the air antenna programming, as shown.

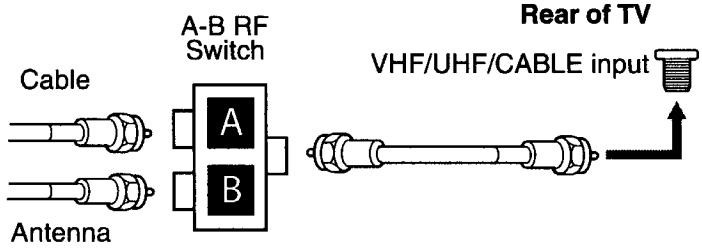

- Be sure to set **Cable** setting to **Cable On** or **Cable Off** in **Channel** menu for the type of input signal you choose (see page 30 for more details.).

HD Cable Box/HD Satellite Box

You can also enjoy high definition programming by subscribing to high definition cable service or high definition satellite service. For the best possible picture, connect these components to your TV via the HDMI or component video (with audio) input on the back of your TV.

Shown with HDMI Connection

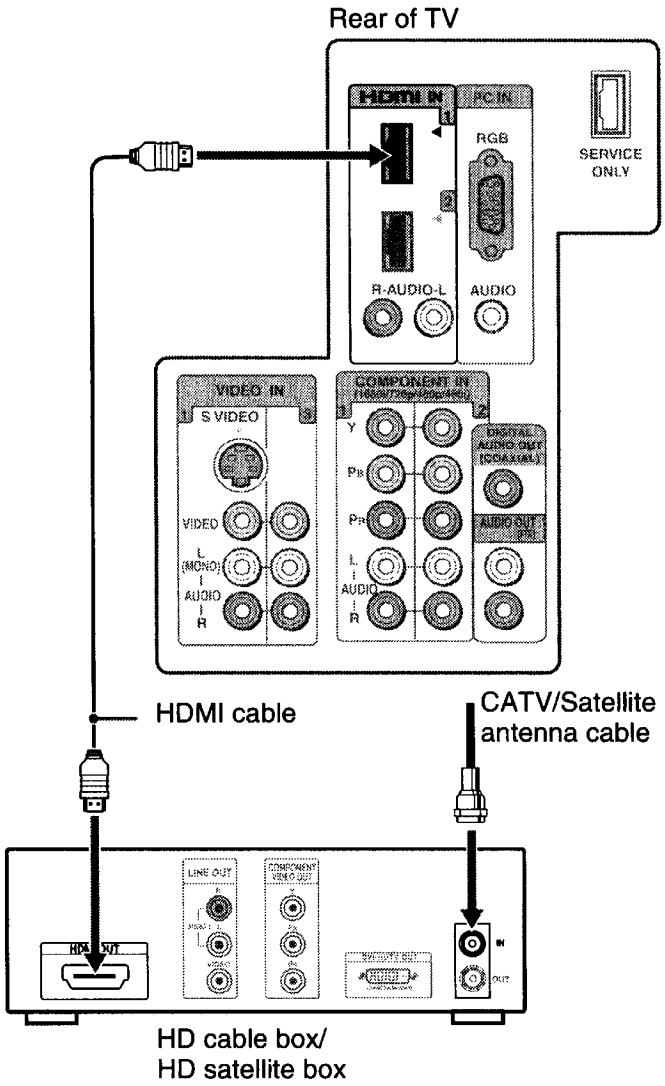

Shown with DVI Connection

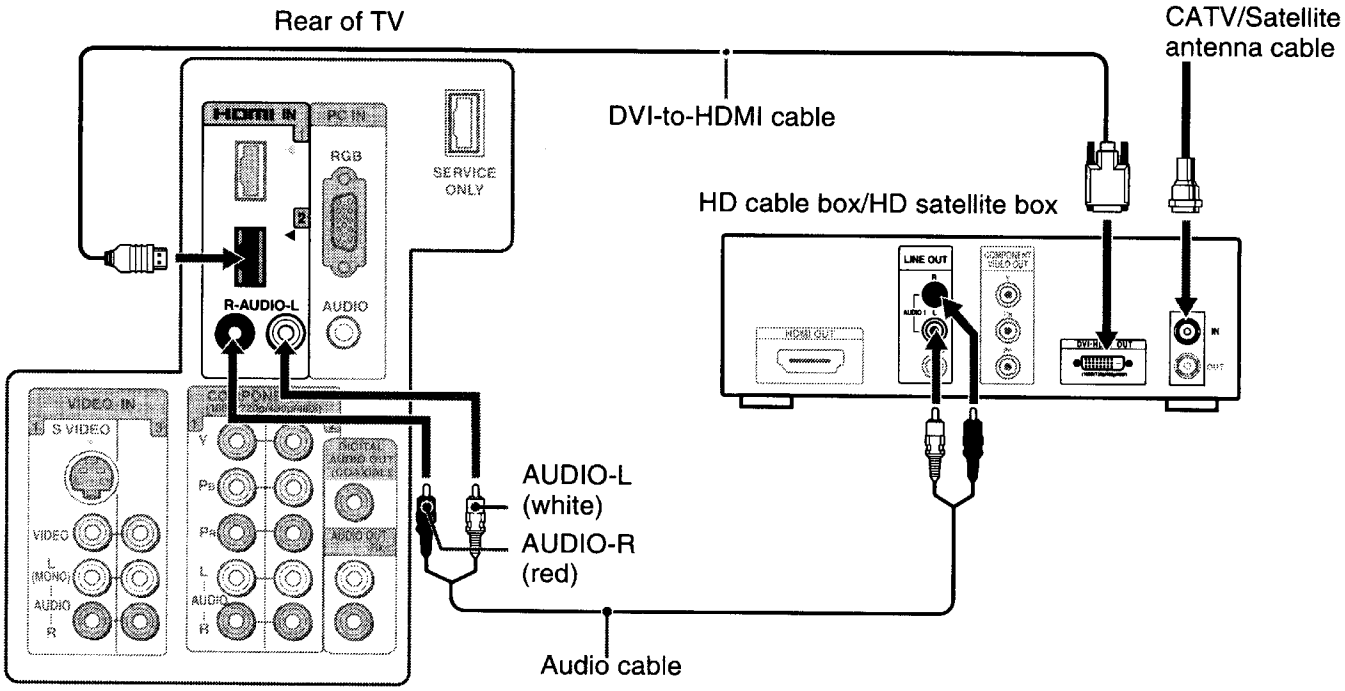

- If the equipment has a DVI and not a HDMI connector, use a HDMI to DVI cable or adapter to connect the DVI output to either HDMI IN 1 or HDMI IN 2 input, and connect the audio jacks to the AUDIO (L/R) jacks below the HDMI IN 2. (DVI connector is for video signals only, the Audio jacks provide support for the audio)

Shown with Component Connection

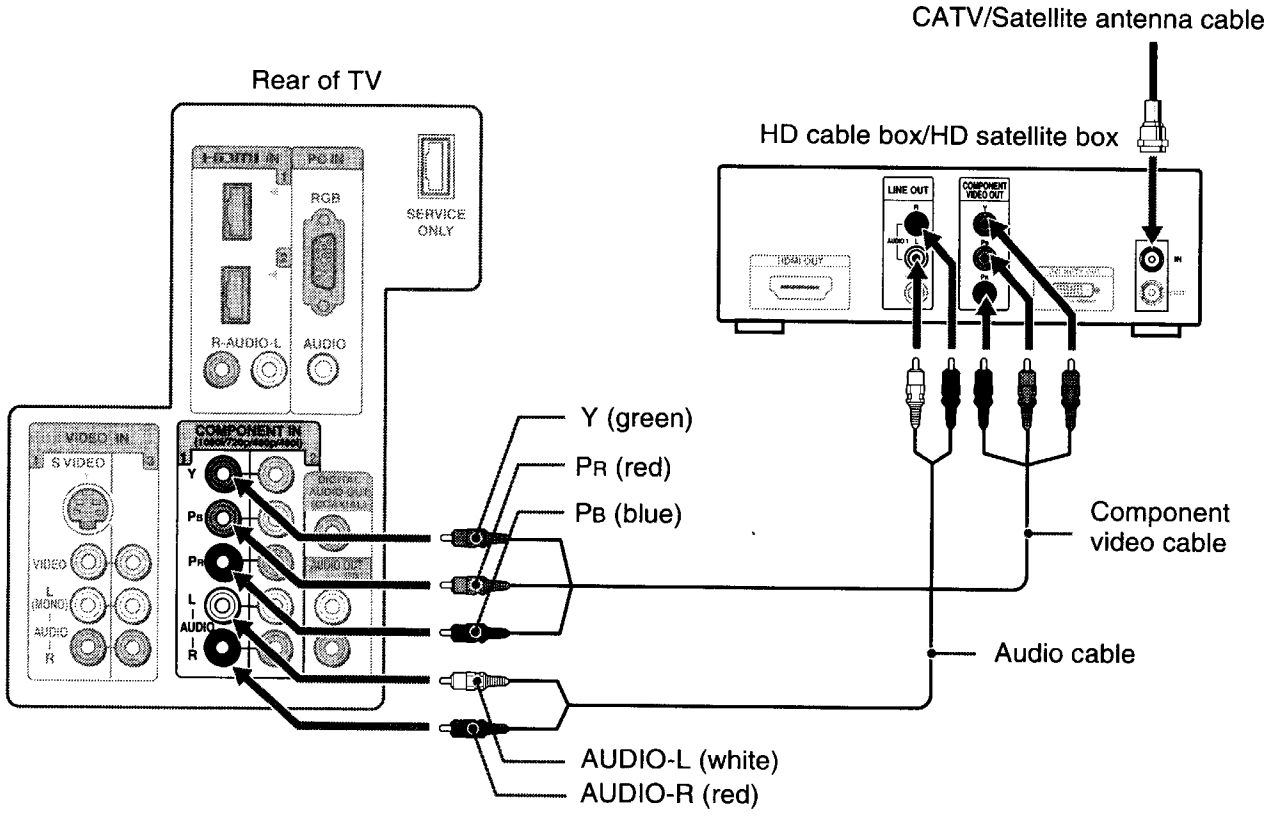

PC

Use the TV as a monitor for your PC.
Shown below with the HD15 to HD15 connection. This TV can also be connected to a PC with DVI or HDMI output. (Refer to the supplied Quick Setup Guide.)

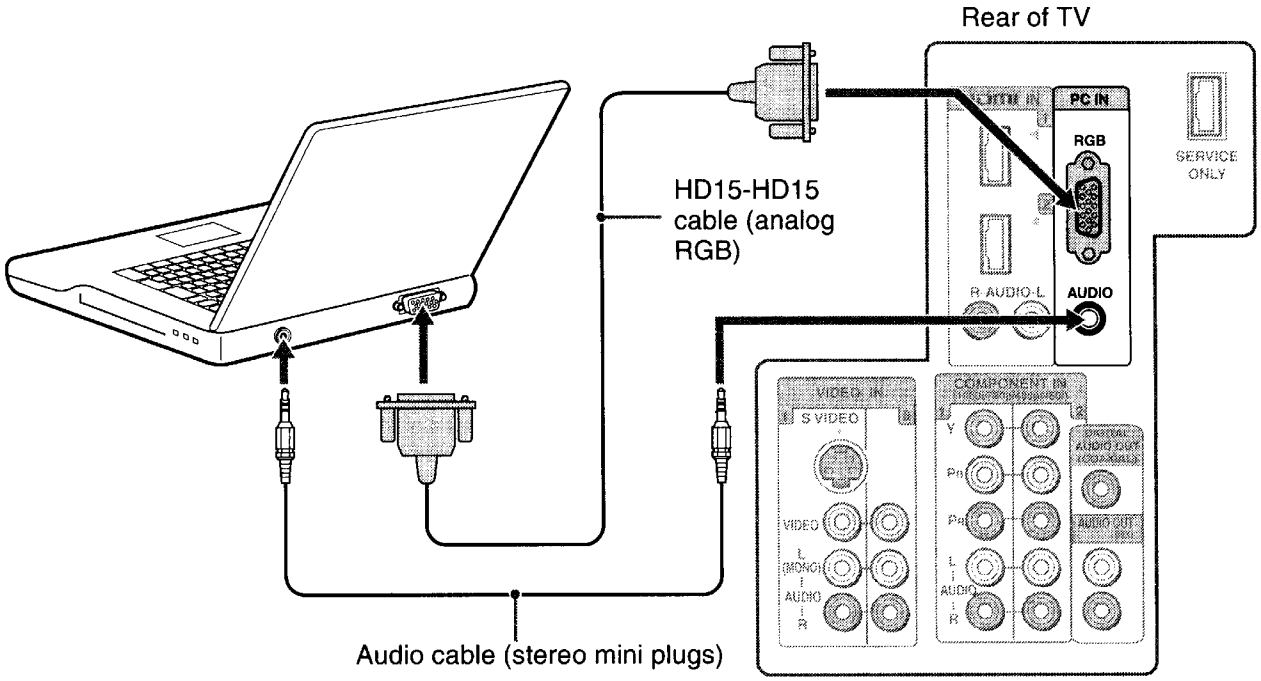

- Connect the PC IN jack to the PC using the HD15-HD15 cable with ferrite core (analog RGB) and audio cable (page 15).

PC Input Signal Reference Chart

After connecting the PC to the TV, set the output signal from the PC according to the chart below.

Signals	Resolution Horizontal (Pixel)	x	Vertical (Line)	Horizontal frequency (kHz)	Vertical frequency (Hz)	Standard
VGA	**640**	×	**480**	**31.5**	**60**	**VGA**
	640	×	480	37.9	73	VESA
	640	×	480	37.5	75	VESA
SVGA	800	×	600	35.2	56	VESA
	800	×	**600**	**37.9**	**60**	**VESA Guidelines**
	800	×	600	46.9	75	VESA
XGA	**1024**	×	**768**	**48.4**	**60**	**VESA Guidelines**
	1024	×	768	56.5	70	VESA

- This TV's PC input does not support Sync on Green or Composite Sync.
- This TV's PC VGA input does not support interlaced signals.
- For the best picture quality, it is recommended to use the signals (boldfaced) in the above chart with a 60 Hz vertical frequency from a personal computer. In plug and play, signals with a 60 Hz vertical frequency will be detected automatically. (PC reboot may be necessary.)

Other Equipment

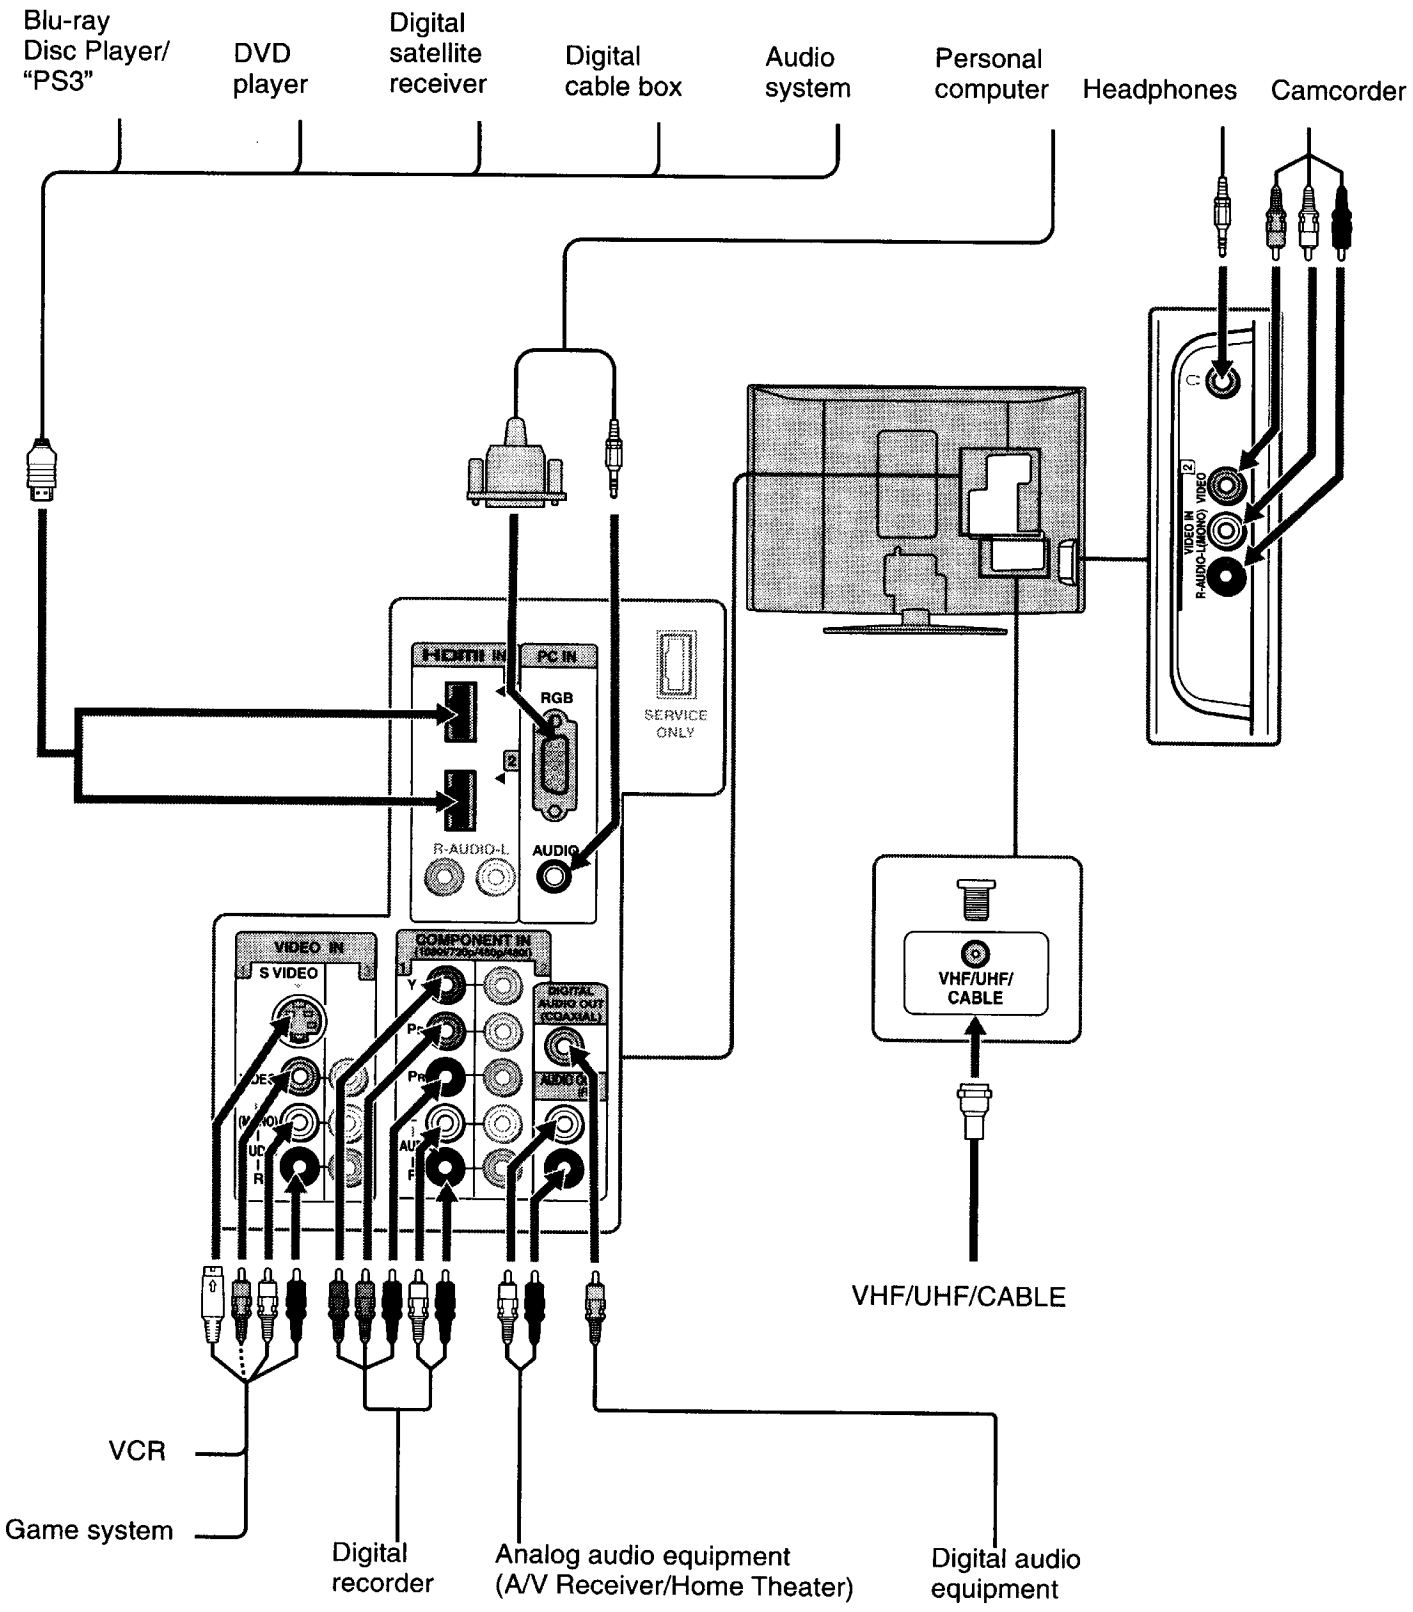

• Refer to the Quick Setup Guide (supplied) when connecting other equipment to your TV.

4. Setting Up the Channel List - Initial Setup

After you finish connecting your TV, you need to run **Initial Setup**, which automatically sets up available channels. The Initial Setup screen appears when you turn on your TV for the first time. If you do not want to set up the channels at this time, you can do it later by selecting the **Auto Program** option in the **Channel** menu (see page 30).

1 Press POWER ◯ to turn on the TV.

The **Initial Setup** screen appears.

2 Press ↑/↓ to highlight the desired language, then press ⊕.

3 The message ***"First please connect cable or antenna"*** and ***"Start auto program now?"*** appears, make sure you already connected Cable or Antenna, then select **Yes** to start **Auto Program.** If you want to start **Auto Program** later press **No**.

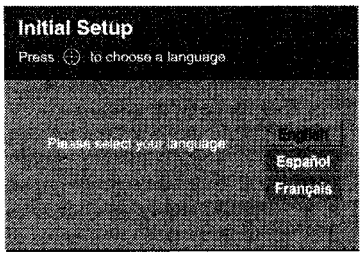

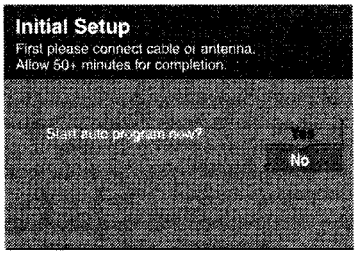

•If you have **Cable** and **Antenna** available, please connect **Cable** first.

4 The scanning of channels will start. If you want to stop and run **Auto Program** later press **Cancel**.

5 When **Auto Program** is complete, press ⊕ to continue

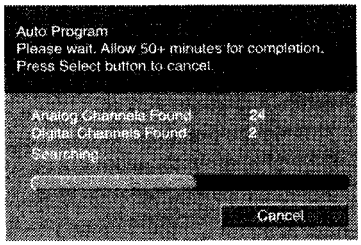

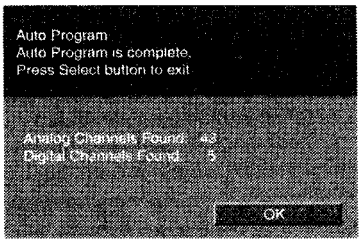

6 If the **Initial Setup** programming found **Cable channels**, you will be able to scan **Antenna channels** as well. Connect the **Antenna**, you can use an A-B RF switch (not supplied) and change the switch to **Antenna**, then start **Auto Program** to search antenna channels. If the **Initial Setup** programming found **Antenna channels**, the **Auto Program** process will finish. If you want to scan **Cable channels**, you can do it later using the **Channel** menu (see page 30).

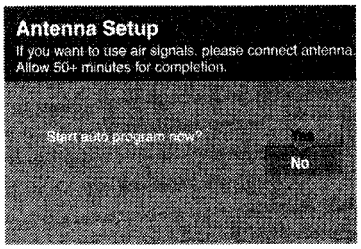

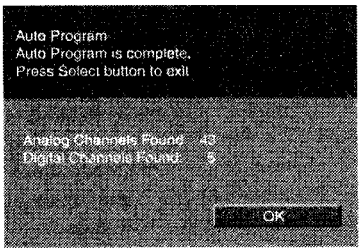

To run Auto Program again at a later time

❑ Use the **Auto Program** feature as described on page 30.

To Display the Picture in your Preferred Aspect Ratio

❑ Select the proper **Wide Mode** as described on pages 23 and 29.

• You may want to set up convenient features such as **Favorites** (see page 26), **Show/Hide Channels** (see page 30), **Label Channels** (see page 30) when **Auto Program** is completed.

Remote Control and TV Controls/Indicators

Inserting Batteries into the Remote control

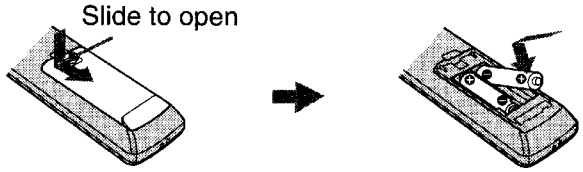

Insert two size AA batteries (supplied) by matching ⊕ and ⊖ on the batteries to the diagram inside the battery compartment of the remote control.

Remote Control

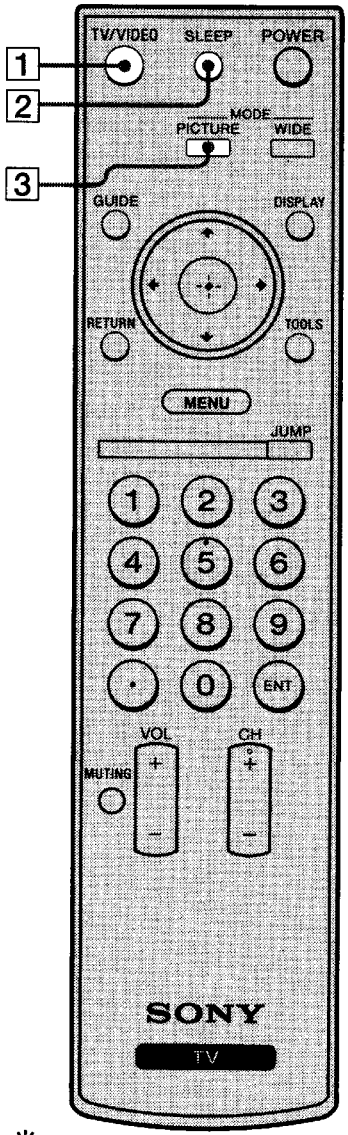

Button	Description
1 **TV/VIDEO**	Press to display the **External Inputs** list, go through the list and select the desired input. • See page 26 on **Applications** menu the External Inputs.
2 **SLEEP**	Press repeatedly until the TV displays the time in minutes (Off, 15, 30, 60 or 120) that you want the TV to remain on before shutting off. To cancel **Sleep**, press SLEEP repeatedly until **Sleep Off** appears.
3 **PICTURE**	Press repeatedly to cycle through the available picture modes: **Vivid, Standard, Cinema.** The picture modes can be also accessed in the **Picture** menu (see page 28).

The 5 and CH + buttons have a tactile dot. Use them as a reference when operating the TV.

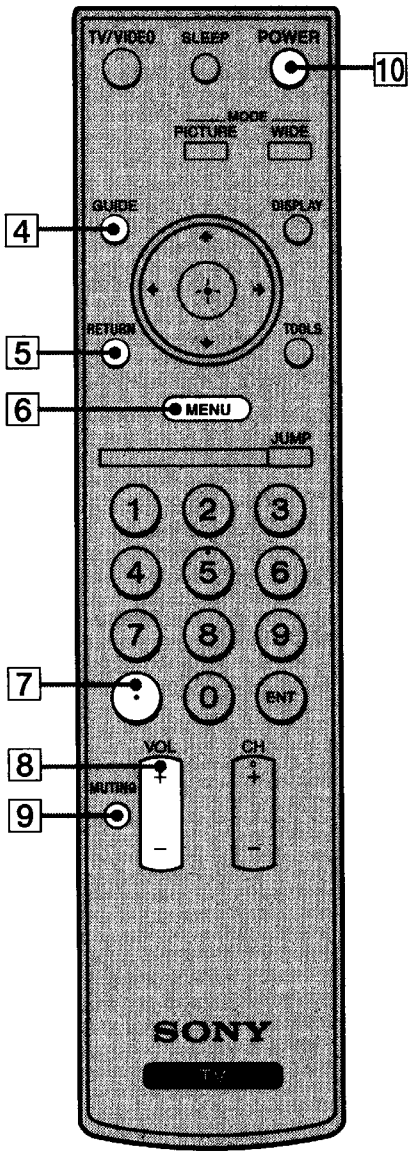

Button	Description
4 **GUIDE** (For all channels including Digital/Analog channels)	Press to display the Guide when you are watching digital channels (if it is available from the station). **Using the Guide** The Guide allows you to select the channels from a channel list; also provides information about the current program being shown on each channel. Information banner Channel list 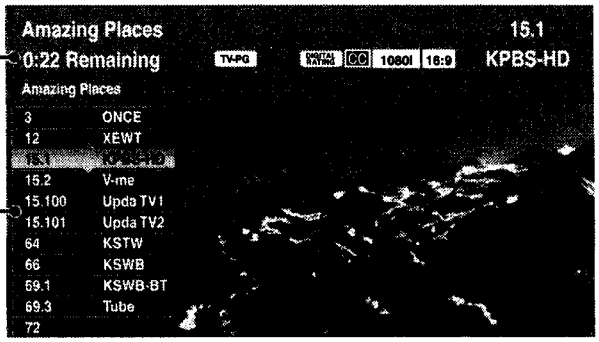 • Program information in the guide is provided by the broadcasters. As a result, it may sometimes include only the channel number, without a program title or description.
5 **RETURN**	Press to go back to the previous screen when displaying **MENU** items and settings.
6 **MENU**	Press to display the **MENU** with TV functions and settings. See **Using the TV Menus** on page 25.
7 ⊙	Use with ⓪-⑨ and ENT buttons to select digital channels. For example, to enter 2.1, press ②, ⊙, ① and ENT.
8 **VOL +/–**	Press to adjust the volume.
9 **MUTING**	Press to mute the sound. Press again or press **VOL +** to restore the sound.
10 **POWER**	Press to turn On and Off the TV.

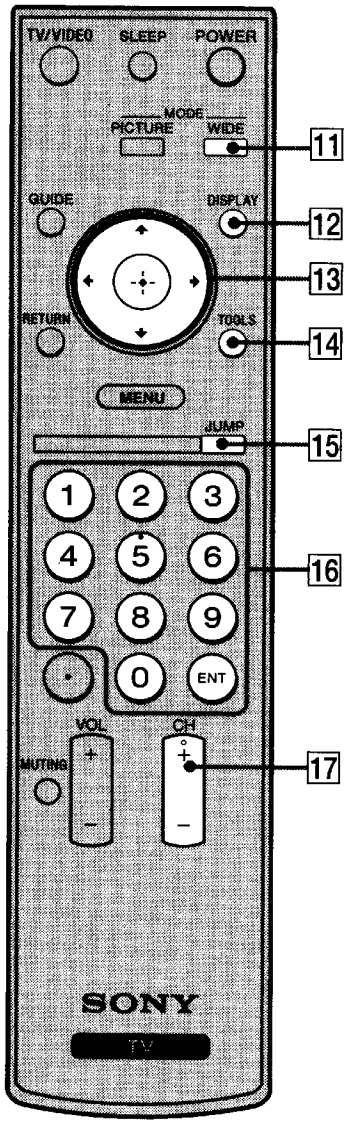

Button	Description
11 **WIDE**	Press repeatedly to step through the **Wide Mode** settings: **Wide Zoom**, **Normal**, **Full**, **Zoom**. The **Wide Mode** settings can be also accessed in the **Screen** menu (see page 29).

Changing the Wide Screen Mode (see page 29 for details)

Wide Mode 4:3 480i/480p Standard definition source	**Wide Mode** 16:9 1080i/720p High definition source
Wide Zoom	**Wide Zoom**
Normal	**Normal** Not Applicable
Full	**Full**
Zoom	**Zoom**

- When the TV receives a 720p or 1080i signal, **Normal** cannot be selected.

12 **DISPLAY**	Press once to display the current channel number, channel label, remaining time, **Wide Mode** and current time. The on screen display (OSD) will turn off after a few seconds.
13 ↑/↓/←/→/⊕	Press ↑/↓/←/→ to move the on-screen cursor. Press ⊕ to select/confirm an item. You can also use this button to see your **Favorites** channels list.
14 **TOOLS**	This function is only available when PC input is active. Press TOOLS to view a channel at the same time as a Picture in Picture screen. (see page 27 for details)
15 **JUMP**	Press to alternate between two channels. The TV will alternate between the current channel and the last channel tuned to with the buttons 0 - 9 and · on the remote control.
16 **0 - 9/ENT**	Press 0 - 9 to select a channel; the channel changes after few seconds. Press ENT to change channels immediately.
17 **CH +/–**	Press to scan through channels.

- The CHANNEL + button has a tactile dot. Use it as a reference when operating the TV.

Indicators

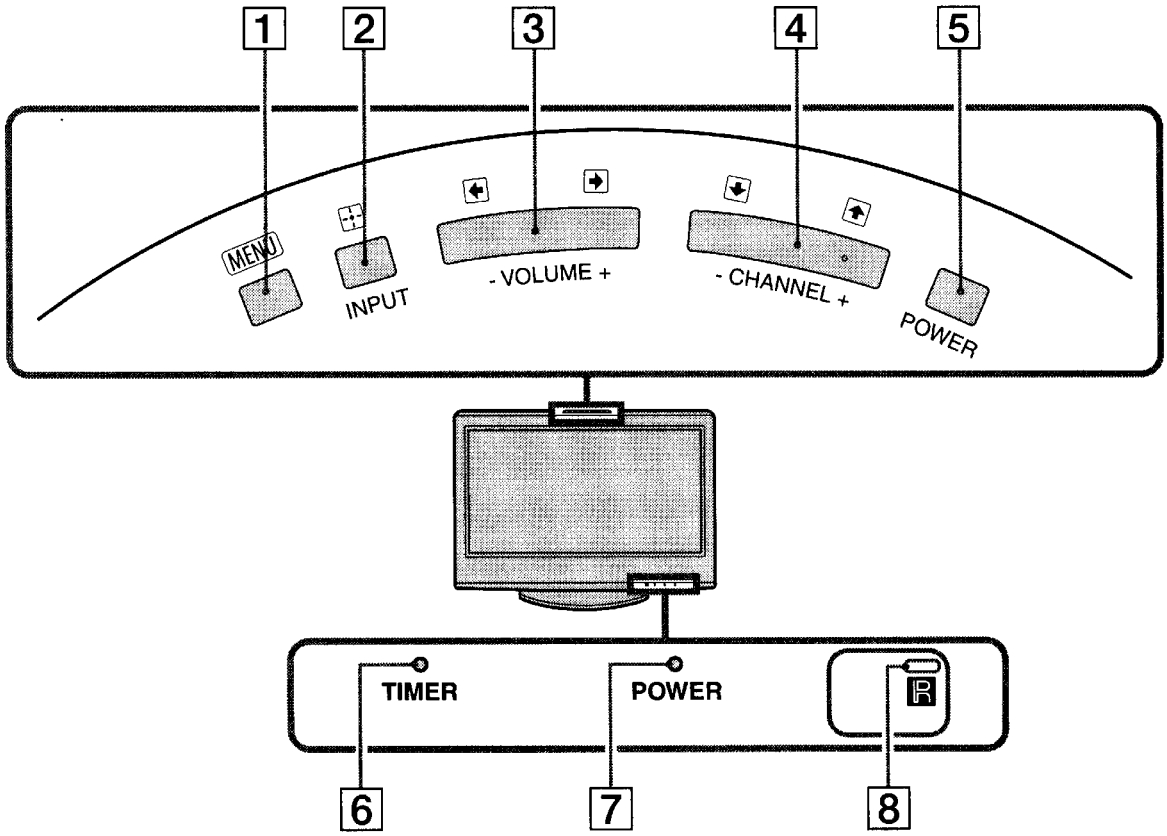

Item		Description
1	**MENU**	Press to display the **MENU** with TV functions and settings (see **Using the TV Menus** on page 25).
2	**INPUT**	Press to display the **External Inputs** list, go through the list and select your desired input. In the **MENU** screen, this button serves as confirming the selection or setting.
3	**– VOLUME +**	Press to adjust the volume. In the **MENU** screen, these buttons serve as left/right buttons.
4	**– CHANNEL +**	Press to scan through channels. In the **MENU** screen, these buttons serve as up/down buttons.
5	**POWER**	Press to turn on and off the TV.
6	**TIMER LED**	Lights up in amber when the timer is set. When the timer is set, this LED will remain lit even if the TV is turned off. For details, see page 36.
7	**POWER LED**	Lights up in green when the TV is turned on.
8	**(IR) Infrared Receiver/ Light Sensor**	Receives IR signals from the remote control. Senses room light level and adjusts the screen brightness accordingly (see page 37 for details). Do not put anything near the sensor, as its function may be affected.

- Make sure that the TV is turned off before unplugging the power cord. Unplugging the power cord while the TV is turned on may cause the Power LED to remain lit for up to 20 seconds or may cause the TV to malfunction.

Using the TV Menus

MENU provides one button access for controlling your TV. It enables you to perform a variety of tasks intuitively with a control panel on the screen rather than a variety of remote control button presses.

Navigating through TV Menus

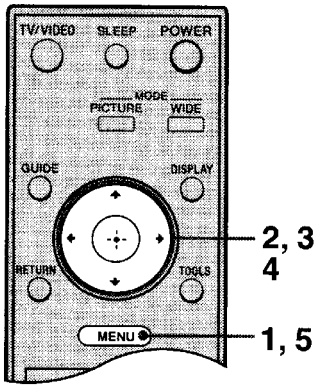

1. Press (MENU) on the remote control to display on screen the Menu options.
2. To highlight a Menu option press ←, then press ↑/↓ to go through the menus.
3. To select an option press ⊕ or →.
4. Press ↑/↓ to select or adjust your desired option, then press ⊕.
5. To exit press (MENU).

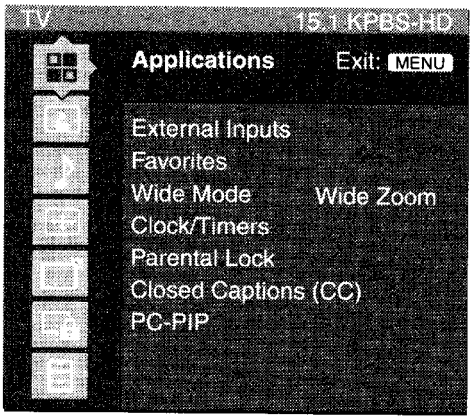

Menu Descriptions

Applications — The **Applications menu** lets you select: **External Inputs, Favorites,** and have shortcuts to **Wide Mode, Clock/Timers, Parental Lock** and **Closed Captions (CC);** also you can select **PC-PIP** function from this menu.

Channel — The **Channel menu** is used to provide maintenance to the channel options; select from menu: **Favorite Channels, Cable, Add Digital Channels, Auto Program, Show/Hide Channels, Label Channels** or **Diagnostics.**

Picture — The **Picture Menu** is used to fine tune the image quality, allows you to customize several parameters for optimal viewing, select from menu: **Picture Mode, Reset, Backlight, Picture, Brightness, Color, Hue, Color Temp.** (Color Temperature), **Noise Reduction** or **Sharpness.**

Parental Lock — The **Parental Lock** feature allows you to set up the TV to block programs according to their content and rating levels; use (0)-(9) on the remote control to enter a four-digit password. The first time you create a password, confirm the password by entering it again.

Sound — The **Sound Menu** allows you to fine tune and change audio; select from menu: **Treble, Bass, Balance, Speaker, MTS, Alternate Audio** or **Reset.**

Setup — The **Setup Menu** provides you additional features like: **Closed Captions (CC), Info Banner, Label Video Inputs, Clock/Timers, Language** or **Light Sensor.**

Screen — The **Screen** menu allows you to change the proportions of the screen, select: **Wide Mode, 4:3 Default, Auto Wide, Vertical Center, Vertical Size** or **Phase.**

Using the Applications Menu

Option	Description
External inputs	This feature lets you select the external inputs connected to your TV. **1** Press ▲/▼ to choose a external input from the list of 9 inputs. **2** To select press ⊕. **3** To exit from External inputs list, press MENU. • To change external inputs again, repeat steps 1-2. • To go back to channels, press **CH +/-** to go through the channels; repeat steps 1-2 and select TV; or press ⊕ to select a channel from your **Favorites** list. • You can also select directly the external inputs list by pressing TV/VIDEO without having to navigate through the Menu.
Favorites	This feature lets you create and choose a list of up to 8 favorite channels. **1** Press ▲/▼ to select the option **Add to Favorites**, to add the current channel to your **Favorites** list, and press ⊕. **2** To exit press MENU • You can also use ⊕ button of the remote control to see your Favorites channel list.
Wide Mode	This option is a direct shortcut to the **Screen** menu for adjust the picture size in the **Wide Mode** option (see page 29).
Clock/Timers	This option is a shortcut to adjust **Clock/Timers** on **Setup** menu (see page 36).
Parental Lock	This option is a shortcut to the **Parental Lock** menu, it allows you to enter a password to block channels (see page 31).
Closed Captions (CC)	This option is a shortcut to **Closed Captions (CC)** screen on **Setup** menu (see page 35).

Option	Description
PC-PIP	This **PIP** (Picture In Picture) feature provides PC input signal and TV channels; allows you to view two pictures simultaneously. When you select this feature from **Applications** menu, the **PC-PIP** will appear with a Sub Window to see TV channels at the same time.

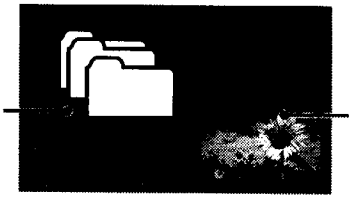

- To turn Off or On the Sub Window on the screen press TOOLS from the remote control, only when you select PC input.
- You can also select **PC** input from the **External Inputs** list. Press MENU, select **External Inputs**, the External inputs list will appear, then select **PC** input.

To change channels in the Sub Window

Press CH +/– to change the channels or enter the channel number using the 0-9 numeric buttons.

To Exit from PC-PIP (PC input)

1 Press MENU and select **External Inputs** on **Applications** menu.

2 From **External Inputs** list, select **TV** input to return to TV Channels.

- To exit from PC-PIP, you can also select from **Applications** menu, the **Favorites** channels list and select the channel of your preference; or just press + to view your **Favorites** channels list.
- When the PC input signal is selected with the Sub Window active, you can just see TV Channels, other external inputs are not available for this view (like VCR/DVD).
- **Closed Captions (CC)** is not available in the Sub Window.
- Parental Lock feature will work in the Sub Window, a padlock will appear on the blocked channels.

Using the Picture Menu

Option	Description
Picture Mode *Customized picture viewing*	Select a mode: **Vivid** (for enhanced picture contrast and sharpness), **Standard** (for standard picture settings, is recommended for home entertainment); or **Cinema** (for viewing film-based content. Most suitable for viewing in a theater-like environment).
Reset	Resets the current **Picture Mode** setting to factory default values.
Backlight	Press ◆/◆ to brighten or darken the backlight, then press ⊕ to set.
Picture	Press ◆/◆ to increase or decrease picture contrast, then press ⊕ to set.
Brightness	Press ◆/◆ to brighten or darken the picture, then press ⊕ to set.
Color	Press ◆/◆ to increase or decrease color intensity, then press ⊕ to set.
Hue	Press ◆/◆ to increase or decrease the green tones, then press ⊕ to set.
Color Temp. (Color Temperature)	Select an option: **Cool** (to give the white colors a bluish tint), **Neutral** (to give the white colors a neutral tint) or **Warm 1, 2** (to give the white colors a reddish tint).
Noise Reduction	Sharpens picture definition to give every object a sharp, clean edge. Select from **Off, Low, Medium** or **High.**
Sharpness	Press ◆/◆ to sharpen or soften the picture, then press ⊕ to set.

Using the Sound Menu

Option		Description
Treble		Press ◆/◆ to increase or decrease higher-pitched sounds, then press ⊕ to set.
Bass		Press ◆/◆ to increase or decrease lower-pitched sounds, then press ⊕ to set.
Balance		Press ◆/◆ to emphasize left or right speaker balance, then press ⊕ to set.
Speaker		Select to turn **On** or **Off** the internal speakers.
MTS	**Mono**	Select for mono reception. Use to reduce noise during weak stereo broadcasts.
	Stereo	Select for stereo reception when viewing a program broadcast in stereo.
	Auto SAP	Select to automatically switch the TV to second audio programs when a signal is received. If no **SAP** signal is present, the TV remains in **Stereo** mode.
Alternate Audio (Audio selection for current program)		This Audio feature for current program lets you select from 8 options of alternate audio (if it is available). You can select from **English**, **Español** (Spanish), **Français** (French) or **Audio 4, 5, 6, 7, 8** audio available options. • **Alternate Audio** is disabled for analog signals and for digital signals that do not have altenate audio streams.
Reset		Resets the current **Sound** settings to factory default values.

Using the Screen Menu

Option	Description	
Wide Mode	These options allow you to change the proportion of the screen.	
	Wide Zoom	Select to enlarge the picture uniformly.
	Normal	Select to display 4:3 pictures in original size when the original source is 4:3.
	✍ • **Normal** is not available when you are watching 1080i or 720p in High Definition source.	
	Full	Select to enlarge the picture horizontally to fill the screen when the original source is 4:3 (standard definition source). When the original source is 16:9 (High definition source), select this mode to display 16:9 picture in original size.
	Zoom	Select to enlarge the original picture without distorting the aspect ratio.
	✍ • If you press WIDE of the remote control you can also select these modes directly.	
4:3 Default	Select the default Screen Mode to use for 4:3 sources.	
	Wide Zoom	Select to enlarge the 4:3 picture to fill the 16:9 screen, keeping the original image as much as possible, with minimal distortion.
	Normal	Select to display the 4:3 picture in its original size.
	Full	Select to enlarge the picture horizontally to fill the screen when the original source is 4:3 (standard definition source).
	Zoom	Select to enlarge the original picture without distorting the aspect ratio.
	Off	To turn **Off** automatic size for 4:3.
Auto Wide	**On**	Select to have the screen automatically change to the screen mode based upon program's content. If frequent screen changes are disturbing to you, select **Off**.
	Off	Select to turn off the Auto Wide option. Choose a screen mode from the **Wide Mode** option.
Vertical Center	Allows you to move the position of the picture up and down.	
Vertical Size	Allows you to adjust the vertical size of the picture.	
Phase	Adjust to fine tune overall sharpness.	
	✍ • **Phase** is disabled when the TV is receiving a different video input	

Using the Channel Menu

Option	Description
Favorite Channels	Lets you set up a list of up to 8 of your favorite channels. **1** Press ▲/▼ to select the option **Add to Favorites** to add the current channel to your **Favorites** list and press ⊕. **2** To exit press MENU. To select a favorite channel from the list, press ▲/▼ to go through the list and ⊕ to select the channel. ✍ • To access quickly to **Favorites** channel list, press ⊕ when there is no menu on the screen.
Cable	**On:** Select if you are receiving cable channels via Cable TV provider.
	Off: Select if you are using an antenna.
Add Digital Channels	Select to add digital channels without replacing the original channel list. This option is useful for antenna installations.
Auto Program	Automatically sets up the channel list on the TV for all receivable channels (Digital and Analogs). ✍ • Before start **Auto Program**, be sure to change to **On** or **Off** on **Cable** option in the **Channel** menu. When it is **On**, the TV will search **Cable channels**; and when it is **Off**, the TV will search **air signals** with an **Antenna** connection. • If you are using an A-B RF switch (not supplied) to switch between **Cable** or **Antenna** connection, be sure to select the correct **Cable** option to **Cable On** or **Cable Off** in the **Channel** Menu. **1** Select **Auto Program**. **2** Select **OK** to start **Auto Program**. When **Auto Program** is done, select **OK**.
Show/Hide Channels	Allows you to show or hide channels that appear when you use the **CH +/-** button. **1** Press ▲/▼ to scroll through the channels until you find the channel you want to show or hide. **2** Press ⊕ to determine if the channel will be shown or hidden. To show or hide more channels, repeat steps 1-2.
Label Channels	Allows you to assign labels to channel numbers. **1** Press ▲/▼ to scroll through the channel numbers. Then press ⊕ to select the channel number that you want to assign a label. **2** Press ◄/►/▲/▼ to move through the label characters (A-Z, 0-9) and press ⊕ to select it. To move to the next character press ◄/►/▲/▼. Repeat to add up to 7 characters to the label. Then select Enter to set it. To assign labels to more channels, repeat steps 1-2. ✍ • To delete a character press ■. • To have a space between characters press ■. • To exit press RETURN.
Diagnostics	Allows to confirm the current channel performance indicator.

Using the Parental Lock

The Parental Lock feature allows you to block programs according to their content and rating levels and block channels (regardless of the programs). Password is necessary in setting up blocking. Use ⓪-⑨ on the remote control to enter a four digit password. The first time you create a password, confirm the password by entering it again.

To View Blocked Programs

Press ENT when tuned to a blocked program, then enter the password. To reactive the **Parental Lock** settings, turn off and on the TV.

Option	Description	
Rating	**Off**	Turn **Parental Lock Off**. No programs are blocked from viewing based on their rating.
	Child	Maximum ratings permitted are: **U.S**: TV-Y, TV-G, G **Canada**: C, TV-Y
	Youth	Maximum ratings permited are: **U.S**: TV-PG, PG **Canada**: C8+, PG, 8 ans+, TV-PG
	Young Adult	Maximum ratings permitted are: **U.S**: TV-14, PG-13 **Canada**: 14+, 13 ans+, TV-14
	Custom	Select to set ratings manually: **U.S**: See page 33 for details. **Canada**: See page 34 for details.
	✍ • If you are not familiar with the **Parental Guideline** rating system, you should select **Child**, **Youth** or **Young Adult** to help simplify the rating selection. To set more specific ratings, select **Custom**.	
Digital Rating *(Available only in U.S.A. where advanced ratings exist)*	**Off**	Turn **Digital Rating** off. No programs containing digital ratings are blocked from viewing.
	Custom	Select to customize the **Parental Lock** with downloadable digital ratings.
	Clear All	Select to clear the downloaded ratings. To cancel just select **Cancel**.
Unrated *Block programs or movies that are broadcast without a rating.*	**Allow**	Allows programs and movies that are broadcast without a rating.
	Block	Blocks all programs and movies that are broadcast without a rating.
	✍ • If you block unrated TV programs, be aware that the following types of programs may be blocked: programs broadcast from another country, emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.	

Option	Description	
Channel Block	This option allows you to block channels regardless of program ratings. The password needs to be set up prior to blocking channels. The blocked channel can only be viewed by entering the correct password. **To block a Channel** Press ▲/▼ to go through the channels and press ⊕ to **Block** or **Allow** channels. **To View a Blocked Channel** Press ENT when tuned to a blocked program, then enter the password. To reactive the **Parental Lock** settings, turn off and on the TV.	
External Input Block	Allows you to block individual video inputs. Press ▲/▼ to scroll through the video inputs and press ⊕ to **Block** or **Allow**.	
Change Password	Select to change your password. Use 0-9 buttons to select a four digit password; to confirm password enter it again. ✍ • You need your password for any future access into the Parental lock settings. If you lose your password, see **Lost Password** on page 40.	
Select Country	**U.S.A**	Select to use U.S.A. ratings.
	Canada	Select to use Canadian ratings.

Custom Rating System Chart
US Models: Selecting Custom Parental Lock Rating Options

To select custom rating options for the U.S., select **U.S.A.** in the **Select Country** setting (see page 32).

Option	*Description*	
Movie Rating	**G**	All children and general audience.
	PG	Parental guidance suggested.
	PG-13	Parental guidance for children under 13.
	R	Restricted viewing, parental guidance is suggested for children under 17.
	NC-17 and X	No one 17 or under allowed.
TV Rating *Block programs by their rating, content or both*	Age-Based Ratings	
	TV-Y	All children.
	TV-Y7	Directed to children age 7 and older.
	TV-G	General audience.
	TV-PG	Parental guidance suggested.
	TV-14	Parents strongly cautioned.
	TV-MA	Mature audience only.
	Content-Based Ratings	
	FV	Fantasy violence.
	D	Suggestive dialogue.
	L	Strong language.
	S	Sexual situations.
	V	Violence.

✍

• To ensure maximum blocking capability, set the Age-Based Ratings.

Canadian Models: Selecting Custom Parental Lock Rating Options

To select custom rating options for Canada, select **Canada** in the **Select Country** setting (see page 32).

Option	*Description*	
English Rating	**C**	All children.
	C8+	Children 8 years and older.
	G	General programming.
	PG	Parental guidance.
	14+	Viewers 14 and older.
	18+	Adult programming.
French Rating	**G**	General programming.
	8 ans+	Not recommended for young children.
	13 ans+	Not recommended for ages under 13.
	16 ans+	Not recommended for ages under 16.
	18 ans+	Programming restricted to adults.
U.S.A. Rating	See **TV Rating** under **U.S.A.** for details on page 33.	

Using the Setup Menu

Option	Description
Closed Captions (CC)	Allows you to select from several closed captions modes (for programs that are broadcast with closed captioning). Select: **Off** (to turn off **Closed Captions**), **On** (to turn on **Closed Captions**), or **Program** (to program **Closed Captions**).
	Programming Closed Captions If you select the **Program** option under **Closed Captions**, you can change the following settings:
Basic	Allows you to select basic closed caption options (EIA-608).
CC1, CC2, CC3, CC4	Displays a printed version of the dialog or sound effects of a program (should be set to **CC1** for most programs).
Text1, Text2, Text3, Text4	Displays network/station information presented using either half of the whole screen (if available).
Digital CC	Allows you to set digital closed captioning to **Basic** (digital EIA-608) or **Advanced** (digital (EIA-708).
Advanced	Allows you to select advanced digital (EIA-708) closed caption options. Select from the available options.
Advanced settings	Allows you to make additional settings for digital (EIA-708) closed captions options. Select from **As Broadcast** or you can customize. If you want to customize the following settings, select an option with ⊕ and return with RETURN button.
Character Style	Select from 7 available styles.
Character Color	35 available colors.
Character Size	Small, Standard, Large.
Edge color	35 available colors.
Background Color	35 available colors.
Window Color	35 available colors.
Character Opacity	Solid, Translucent, Transparent, Flashing.
Character Align	Left, Right, Center, Justified.
Edge Type	None, Raised, Depressed, Uniform, Left Shadow, Right Shadow.
Background Opacity	Solid, Translucent, Transparent, Flashing.
Window Opacity	Solid, Translucent, Transparent, Flashing
Info Banner	Set **On** or **Off**. When **On**: displays the program name and the remaining time (if the broadcaster offers this service). Displays for a few seconds when the channel is changed. If you don't want to display the **Info Banner** select **Off**.

Option	Description	
Label Video Inputs	Allows you to identify A/V equipment you connected to the TV, such as a VCR, DVD, etc. For example, if you have a DVD player connected to the VIDEO 1 input, you can select the label DVD for the VIDEO 1 input. Then when you press TV/VIDEO to change inputs, the Video Label you assigned to that input appears on screen. **1** Press ↑/↓ to highlight the input (from 1 to 8) to which you want to assign a label, then press ⊕ to select it. **2** Press ↑/↓ to highlight one of the displayed labels, then press ⊕ to select it. You can select from the following labels for each input: DVD, VCR, Blu-Ray, Cable Box, Satellite, DVR, Game, Camcorder, Skip (your TV skips the input you selected when you press the TV/VIDEO button on the remote control). • The skip label is useful for inputs to which no equipment is connected.	
Clock/Timers	**Sleep**	Set the time in minutes (Off, 15, 30, 60 or 120 minutes) that you want the TV to remain on before shutting off automatically.
	Timer	You can use the Timer to tune to a specific channel at a scheduled time. Select **Off** (Select to turn off the timer; your previous settings are saved); **On** (to turn on the timer; your previous settings are saved); or **Program** (to set the timer by **Time**, **Days**, **Duration**, **Channel** and **Volume Setup** that you want to tune to a specific channel at scheduled time). If you select **Program**, press ↑/↓ (change the values) or ←/→ (move through the options) to set the hour, minutes, AM/PM, days, duration and volume setup. To set a channel press 0-9 (numeric values) and ⊕ (if the channel is digital) on the remote control. To replace a channel press → on the remote control, then press ← to go back to the channel selection and enter a new channel number. You can program External inputs as well instead of a channel. Press TV/VIDEO on the remote control to go through the external inputs and select the desired input that you want to program. • **Timer** feature will be not available until you set the **Current time**.
	Current Time	Select to set the current time (day, hour, minutes and AM/PM). **1** Press ⊕ to select **Current Time**. **2** Press ↑/↓/←/→ to set day, hour, minutes and AM/PM. **3** Press MENU to exit.
Language	Select to display all on-screen settings in your language of choice: **English, Español** (Spanish), **Français** (French).	

Option	Description
Light Sensor	Select **On** to enable the automatic picture (screen) brightness control. The light sensor measures the room brightness which allows the TV to automatically adjust the backlight brightness based on the picture settings and the ambient room light conditions. ✍ • Be sure not to put anything around the sensor, as its function may be affected. • In low light the range of the backlight control is reduced when **Light Sensor** is set to **On**.

Troubleshooting

If you have additional questions, service needs, or required technical assistance related to the use of your Sony TV, please visit our website or call one of the following numbers:

http://www.sony.com/tvsupport
1-800-222-SONY(7669) for US Support
1-877-899-SONY(7669) for Canadian Support

Condition	Explanation/Solution
No picture.	
No picture.	❑ Confirm your external inputs list and make sure you select TV (Cable/Antenna channels). See page 26 for more details. ❑ Perform **Auto program** to add receivable channels that are not presently in the TV's memory (page 30).
Cannot receive any channels.	❑ Make sure the power cord is connected securely. ❑ Turn on the power of the TV. ❑ Check antenna/cable connections. ❑ Perform **Auto Program** to add receivable channels that are not presently in the TV's memory (page 30).
TV is locked to one channel.	❑ Perform **Auto Program** to add receivable channels that are not presently in the TV's memory (page 30).
Cannot receive or select channels.	❑ To receive or select cable channels, make sure that **Cable** in **Channel** settings is set to **On**. To receive or select UHF channels over an antenna, make sure **Cable** is set to **Off**. Perform **Auto Program** to add receivable channels that are not presently in the TV's memory (page 30).
The TV turns off automatically.	❑ Check if **Sleep** is activated, or confirm the **Duration** setting of **Timer**. (page 36). ❑ If there is no signal, the TV will turn off automatically.
No picture from some video sources.	❑ Check the connection between the optional video equipment and the TV. ❑ Press TV/VIDEO on the remote control (page 21). ❑ Press MENU on the remote control. Select your desired input from the External Inputs list.
Poor picture.	
Double images or ghosts.	❑ Check antenna/cable connections. ❑ Check the antenna location and direction.
Only snow and noise appear on the screen.	❑ Check if the antenna is broken or bent. ❑ Check if the antenna has reached the end of its serviceable life. (3-5 years in normal use, 1-2 years at the seaside.)
Dotted lines or stripes.	❑ Keep the TV away from noise sources such as cars, motorcycles, or hair-dryers. ❑ If using 300 ohm twin lead, move the excess lead away from the TV or try using 75 ohm coaxial cable instead.
No color/Dark picture/Color is not correct/The picture is too bright.	❑ Press PICTURE to select the desired picture mode (page 21). ❑ Adjust the **Picture Mode** options in the **Picture** menu (page 28).

Condition	Explanation/Solution
Noisy picture.	❑ Make sure that the antenna is connected using a 75-ohm coaxial cable (not supplied). ❑ Keep the antenna cable away from other connecting cords. ❑ To avoid TV interference, make sure to use an undamaged antenna cable.
No sound/Noisy sound	
Good picture, no sound.	❑ Check the volume control. ❑ Press MUTING or **VOL +** so that "Muting" disappears from the screen (page 22). ❑ Disconnect your headphones. ❑ Set **Speaker** to **On** in the **Sound** menu (page 28). If it is set to **Off**, sound is not output from the TV's speakers regardless of the TV's volume control.
Audio noise.	❑ Make sure that the antenna is connected using a 75-ohm coaxial cable (not supplied). ❑ Keep the antenna cable away from other connecting cords. ❑ To avoid TV interference, make sure to use an undamaged antenna cable.
No sound	❑ If you connected an audio device, it is necessary to have a video connection.
PC Input	
No Picture/No Signal.	❑ Confirm the PC is correctly connected to the TV in the **PC IN** (not supplied HD15 cable). ❑ Ensure the output signal from the PC is one of the formats listed on page 18. ❑ Turn the PC **Off**. Confirm the PC connection and restart the PC. Plug and play will auto-detect the TV and correctly set up PC timing.
Poor picture.	❑ Adjust the resolution (see page 18). ❑ Adjust Phase (see page 29).
General	
Wide Mode changes automatically.	❑ The current **Wide Mode** setting is automatically replaced with the **4:3 Default** setting when you change the channel or video input, if **4:3 Default** in the **Screen** menu is set to other than **Off**. If you want to lock in **Wide Mode** selected with WIDE on the remote control, set **4:3 Default** to **Off** in the **Screen** menu (page 29). ❑ Turn off the **Auto Wide** option in the **Screen** menu (page 29).
Suddenly the picture gets smaller.	❑ The picture gets smaller during the commercials, this is due to the method the provider broadcasts their contents. When HD content channels switch to SD definition content (commercials), the picture may be small with a black border.
"Black box" on screen.	❑ You have selected a text option and no text is available. (See page 35.) To turn off this feature, set the **Closed Captions** option to **Off**. If you were trying to select closed captioning, select **CC1** instead of **Text1-4**.
Black bands appear at the top and bottom of the screen.	❑ Some wide screen programs are filmed in aspect ratios that are greater than 16:9 (this is especially common with theatrical releases). Your TV will show these programs with black bands at the top and bottom of the screen. For more details, check the documentation that came with your DVD (or contact your program provider). ❑ Programs in 4:3 aspect ratio will have bands on left and right sides of the screen, to select full size see page 29.
Certain programs on DVD or other digital sources display a loss of detail, especially during fast-motion or dark scenes.	❑ The compression used by certain digital broadcasts and DVDs may cause your TV's screen to display less detail than usual, or cause artifacts (small blocks or dots, pixelations) to appear on your screen. This is due to your TV's large screen and ability to show very fine detail, and is normal for certain digitally recorded programs.

Condition	Explanation/Solution
Remote control does not operate.	❑ Check the polarity of the batteries or replace the batteries. ❑ Point the remote control at the remote control sensor of the TV. ❑ Fluorescent lamps can interfere with your remote control operation; try turning off the fluorescent lamps. ❑ Keep the remote control sensor area clear from obstacles.
Some digital cable channels are not being displayed.	❑ Certain cable companies have limitations on the broadcast of digital cable channels. Check with your cable company for more information. ❑ The digital cable channel may be set to **Hidden** in the **Show/Hide Channels** setting (see page 30).
Lost password.	❑ Select the **Parental Lock** menu, then enter the following master password: 4357. The master password clears your previous password and allows you to enter a new password (page 31).
How to reset the TV to factory settings.	❑ Turn on the TV. While holding down the ▲ button on the remote control, press the **POWER** button on the TV. Release the ▲ button. WARNING: The Reset will clear all of your customized settings including **Parental Lock** setting.

Specifications

Model	KDL-26M3000/ KDL-26ML130	KDL-32M3000/ KDL-32ML130	KDL-37M3000
System			
Television system	NTSC: American TV standard ATSC (8VSB terrestrial): ATSC compliant 8VSB QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)		
Channel coverage	Analog terrestrial: 2-69 / Digital terrestrial: 2-69 Analog Cable: 1-125 / Digital Cable: 1-135		
Panel system	LCD (Liquid Crystal Display) Panel		
Speaker output	10 W + 10 W		
Input/Output jacks			
Antenna	75-ohm external terminal for VHF/UHF		
VIDEO IN 1/2/3	S VIDEO (4-pin mini DIN)(VIDEO 1 only): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / C: 0.286 Vp-p (Burst signal), 75 ohms VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative AUDIO: 500 mVrms (100% modulation)/ Impedance: 47 kilohms		
COMPONENT IN 1/2	YPBPR (Component Video): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / PB: 0.7 Vp-p, 75 ohms / PR: 0.7 Vp-p, 75 ohms / Signal format: 480i, 480p, 720p, 1080i AUDIO: 500 mVrms (100% modulation)/ Impedance: 47 kilohms		
HDMI IN 1/2	HDMI: Video: 480i, 480p, 720p, 1080i / Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24bits AUDIO: 500 mVrms (100% modulation)/ Impedance: 47 kilohms		
AUDIO OUT	500 mVrms (100% modulation)/ More than 500 mVrms (Fixed)		
PC IN	D-sub 15-pin, analog RGB, 0.7 Vp-p, 75 ohms, positive See the PC Input Signal Reference Chart on page 18.		
PC AUDIO INPUT	Stereo mini jack, 500 mVrms, 47 kilohms		
Headphones	Stereo mini jack / Impedance: ≥ 16 ohms		
Power and others			
Power requirement	120 V AC, 60 Hz		
Power consumption			
in use	135 W	170 W	180 W
in standby	All models less than 1 W		
Screen size (inches measured diagonally)	26	31.5 (32 class)	37
Display resolution (horizontal × vertical)	1,366 dots × 768 lines		
Speaker/Full range (2)	146 × 35 mm 5 3/4 × 1 3/8 inches		
Dimensions (W × H × D)			
with stand (mm) (inches)	662 × 515 × 214 26 1/8 × 20 3/8 × 8 1/2	796 × 590 × 214 31 3/8 × 23 1/4 × 8 1/2	918 × 655 × 265 36 1/4 × 25 7/8 × 10 1/2
without stand (mm) (inches)	662 × 468 × 108 26 1/8 × 18 1/2 × 4 3/8	796 × 544 × 100 31 3/8 × 21 1/2 × 4	918 × 609 × 108 36 1/4 × 24 × 4 3/8
wall-mount hole pattern (mm)	200 × 100	200 × 200	300 × 200
Mass			
with stand	13 kg 29 lb.	16 kg 36 lb.	22 kg 49 lb.
without stand	11 kg 25 lb.	14 kg 31 lb.	18.5 kg 41 lb.
Supplied accessories	Remote control RM-YD021 (1) / Size AA batteries (2) / Support belt (1) / Securing screw (1) / Wood screw (1) / Cable holder (1 attached to the Table-Top Stand) / Operating Instructions (1) / Quick Setup Guide (1) / Warranty Card (1) / Online Registration Card (U.S.A. and Canada only) (1) / Wall-Mount Installation Instructions (1)		
Optional accessories	Headphones plug adapter / Connecting cables / Wall-Mount Bracket: SU-WL100 (KDL-26M3000 and KDL-26ML130), SU-WL500 (KDL-32M3000, KDL-32ML130, and KDL-37M3000) / 75-ohm coaxial cable (1) / HD15-HD15 cable (1)		

• Design and specifications are subject to change without notice.

Index

4:3 Default 29

A

AUDIO OUT jack, described 15
Auto Program 30
Auto Wide 29

B

Backlight 28
Balance 28
Bass 28
Brightness 28

C

Cable 30
Cable holder 11
Canadian Models 34
CH+/– button 23
Change Password 32
Channel Block 32
Clock/Timer 26
Closed Caption (CC) 26
Color 28
Color Temp. (Color Temperature) 28
COMPONENT IN jack (1080i/720p/480p/480i), described 15

D

Diagnostics 30
DIGITAL AUDIO OUT (Coaxial), described 15
Digital Channels 30
Digital Rating 31
DISPLAY button 23

E

English Rating 34
ENT button 23
External Input Block 32
External inputs 26

F

Favorite Channels 30
Favorites 26
French Rating 34

G

GUIDE button 22

H

HDMI IN jack, described 14
Headphones jack, described 13
Hue 28

I

Infrared Receiver (IR) 24
INPUT 24
Installing the TV on a wall 12

J

JUMP button 23

L

Label Channels 30
Light Sensor
  Described 24

M

Menu
  Applications 26
  Channel 30
  Parental Lock 31
  Picture 28
  Screen 29
  Setup 35
  Sound 28
MENU button 22, 24
Movie Rating 33
MTS 28
MUTING button 22

N

Noise Reduction 28

P

Parental Lock 26, 31
PC IN 15
PC-PIP 27
Phase 29
Picture 28
PICTURE button 21
Picture Mode 28
POWER button 22, 24
POWER LED 24

R

Rating 31
Reset 28, 40
RETURN button 22

S

S VIDEO jack, described 14
Select Country 32
SERVICE ONLY 15
Setting up channels 20
Sharpness 28
Show/Hide Channels 30
SLEEP button 21
Speaker 28

T

TIMER LED 24
TOOLS button 23
Treble 28
Troubleshooting 38, 39, 40
Turning on/off the TV 24
TV Rating 33
TV/VIDEO button 21

U

U.S.A. Rating 34
Unrated 31
US Models 33

V

Vertical Center 29
Vertical Size 29
VHF/UHF input, described 15
VIDEO/AUDIO (L/R) jacks, described 13, 14
VOL+/– button 22, 24

W

WIDE button 23
Wide Mode 26, 29

For Your Convenience

Please contact Sony directly if you:

- Have questions on the use of your television after reading your operating instruction manual and Quick Setup Guide
- Experience difficulty operating your television

Contact Sony Customer Support at:

http://www.sony.com/tvsupport

or to speak with a support representative:

United States
1-800-222-SONY (7669)

Canada
1-877-899-SONY (7669)

Sony will work to resolve your questions more quickly than your retailer or place of purchase.

Please Do Not Return the Product to the Store

3213437132

http://www.sony.net/

Printed in U.S.A.

SONY

3-213-438-**11**(2)

3213438112

KDL-26M3000
KDL-26ML130
KDL-32M3000
KDL-32ML130
KDL-37M3000

Quick Setup Guide

For further information, see the Operating Instruction Manual supplied with the TV.
Please retain this guide for your future reference.

For Your Convenience

Please contact Sony directly if you have questions on the use of your television after reading your Quick Setup Guide and Operating Instruction Manual.

Contact Sony Customer Support at:

http://www.sony.com/tvsupport

Or to speak with a support representative:

United States	**Canada**
1-800-222-SONY (7669)	1-877-899-SONY (7669)

Please Do Not Return the Product to the Store

©2007 Sony Corporation Printed in U.S.A.

1 Your New BRAVIA™ Flat-panel LCD HDTV

Congratulations! Your new BRAVIA™ TV opens the door to the "Stunning HD Experience". This guide will explain how to get the most from your new High Definition TV.

Learn more. Visit the Sony HDTV Learning Center **www.sony.com/HDTV**
Please take these steps before you power up your BRAVIA™:

- Register online at:
  www.sony.com/registration (from U.S.A.)
  www.SonyStyle.ca/registration (from Canada)
- Make sure you've removed all accessory contents from packaging.
- Install 2 AA batteries (supplied separately) in your remote control.
- Determine whether you will hang your TV on a wall or place it on a floor stand. Sony wall mounting brackets are designed to provide the best fit.
- Give your TV 2 3/8 inches (6 cm) of space behind it to properly ventilate.

The Four Steps to a Stunning HD Experience: Set, Sound, Source, and Setup

Along with your BRAVIA™ TV **set**, a complete HD system requires an HD **sound** system, a **source** of HD content, and proper **setup** connection with components such as your HD cable or satellite box.
You must get HD programming to experience the stunning detail of HDTV.

The quality of the image you see on your BRAVIA™ can only be as high as the quality of the signal it is displaying. This chart shows the different signal types and how to access them.

Best Signal Performance ↑

	Comments	Sources
High Definition Content	Best Picture Quality 16:9 Aspect Ratio	HD Over-The-Air Antenna HD Cable Subscription/ Programming HD Satellite Subscription
Digital Content	Good Picture Quality Aspect Ratio based on Program	Over-The-Air Antenna Digital Cable Subscription Digital Satellite Subscription
Analog Content	Original TV format 4:3 Aspect Ratio	Over-The-Air Antenna Cable Subscription

Contact your cable or satellite provider to upgrade your service to HD. Receive over-the-air HD broadcasts with an HD-quality antenna (www.antennaweb.org) and discover the wealth of entertainment now available on super-high-resolution Blu-ray Disc™.

2 Connecting Your TV

Your BRAVIA™ TV must be properly connected to components such as sound system and cable or satellite box.

See reverse side of this poster for sample connection diagrams.

- Turn off and unplug all components before making connections.
- Do not turn on the TV until connection setup is completed.

Audio/Video Performance ↑

Input Connector	Video Connection	Audio Connection	High or Standard Definition Quality
HDMI 1 **HDMI 2**	 **HDMI connection***	HDMI cable carries both video and audio signals. Separate audio cable is not needed. (*When HDMI is connected to DVI with an adapter, a separate audio L/R is necessary.)	1080i, 720p, 480p, 480i, PC (Compatible with HD or SD content)
Component 1 **Component 2**	 **Component connection**	 **Audio L/R**	1080i, 720p, 480p, 480i (Compatible with HD or SD content)
Video 1	 **S VIDEO connection** (Use this connector in place of composite video connector)	 **Audio L/R**	480i (SD content)
Video 1 **Video 2** **Video 3**	 **Composite video connection** (Shown with video and audio connectors)	 **Audio L/R**	

What is HDMI™?

HDMI (High-Definition Multimedia Interface) cables are the standard for connecting HDTV. They are built to properly handle high bandwidth, uncompressed video and multi-channel audio—all in one cable.

Connecting a PC to Your BRAVIA™

- May require **DVI-to-HDMI** adapter and separate audio connector when connecting to the HDMI input.
- Connect PC's audio output when using a Digital Video Interface (DVI) or HD15 connection.
- Press PC's FUNCTION Key + Select Output to transmit to TV.
- Refer to your BRAVIA™ Operating Instruction Manual for more information.

To learn more about HDTV, visit www.sony.com/HDTV

3 Running Initial Setup

Initial Setup instructions are displayed on the screen when your BRAVIA™ is powered on for the first time.

1 Select the language for the OSD (on screen display).

2 Connect either **Cable** or **Antenna** to your TV (you can connect both using an A-B RF switch). If you connect **Cable**, the TV will scan cable channels. After this scanning, you can search antenna channels as well.

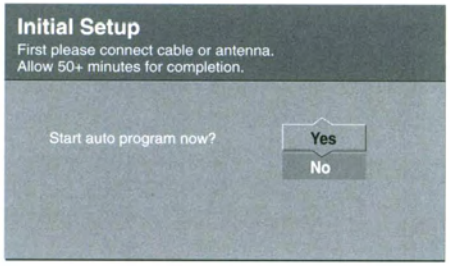

✍ If you have Cable and Antenna connection available, please connect Cable first.

If you are not using the VHF/UHF/CABLE connection to TV, you can cancel the **Auto Program** by selecting **No**.

3 Your TV will detect the type of signal connected and will start scanning for the channels.

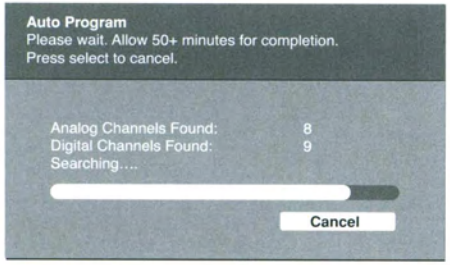

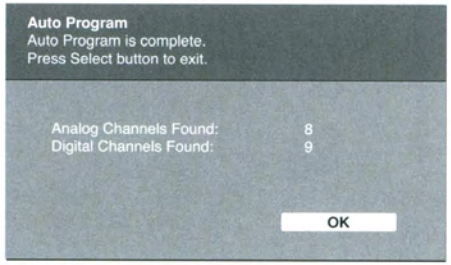

4 If the initial setup programming found **Cable channels**, you will be able to scan **Antenna channels** as well. Connect the **Antenna** (using an A-B RF switch, not supplied) and change the switch to **Antenna**, then start auto program to search antenna channels.

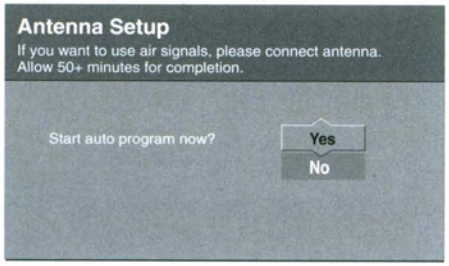

To Access Initial Setup by Remote Control

If you did not follow the **Initial Setup** screen the first time, press the MENU button on your remote control to display the **Menu** window and select the **Channel** menu.

1 **Channel** menu options appears.

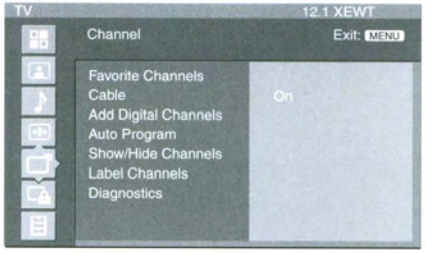

2 Select **Cable On** (for cable channels) or **Off** (for antenna channels); then select **Auto program**.

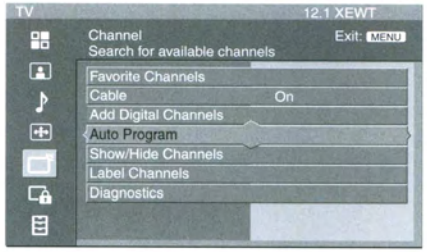

3 Select **OK** to start auto program.

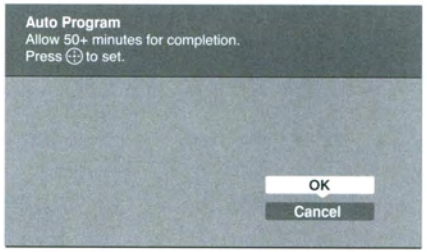

✍ If you start auto program make sure you change to **Cable On** or **Off** and check the **Cable** or **Antenna** connection as well.

To Do List

When the **Initial Setup** is completed, consider carrying out these items:

- **Set Clock/Timers**
- **Set Closed Captions (CC)**
- **Set Parental Lock**
- **Show/Hide Channels**
- **Label Video Inputs (skip inputs)**
- **Label Channels**
- **Speaker On/Off**

For details, refer to your BRAVIA™ Operating Instruction Manual.

4 Watching Your TV

Select Your Content Source

Whether you are watching cable, satellite or broadcast TV; playing a VCR, DVD or Blu-ray Disc™; or connecting to your PC, you need to choose the correct Input using your remote control:

- Press the MENU button on your remote control to display on-screen the **Applications** menu, then select **External Inputs** and will appear the list of external inputs; OR
- Press the TV/VIDEO button to display the list of external inputs and choose the desired input.

Adjust Screen Shape and Aspect Ratio

High Definition and Standard Definition signals are transmitted with different aspect ratios (the width-to-height shape of the image). Most HD signals use a widescreen aspect ratio of 16:9. Most SD signals use a boxy 4:3 aspect ratio. The 16:9 aspect ratio looks perfect on your BRAVIA™, but a 4:3 image must be adjusted to look right. You can:

- Adjust your TV so boxy 4:3 images are automatically re-configured (zoomed or stretched) to fit the wide TV screen; OR
- Watch SD content in its original, boxy format with wide black bars surrounding the image to fill in unused space (for example, you may prefer to watch an old classic movie in its original 4:3 format, not reconfigured for a wide screen).
- Press the WIDE button on your remote control to display the **Wide Mode** setting of your preference.
- Visit www.learningcenter.sony.us/HomeAudioandVideo/Televisions/Research1/TheBasicsofDTV for more information.

Customize Sound and Picture Quality

You can choose optimum sound and picture settings to match the content you are displaying on your TV:

- Press the MENU button on your remote control and select **Picture** or **Sound** menu, then choose the appropriate setting for your content.
- Use the remote control PICTURE button to quickly adjust picture quality.
- Refer to your BRAVIA™ Operating Instruction Manual for more information.

To learn more about HDTV, visit www.sony.com/HDTV

MENU

TV/VIDEO

WIDE

MENU

PICTURE

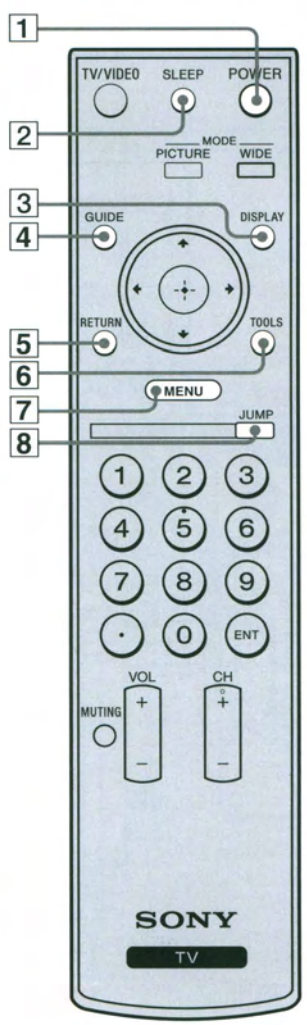

Button	Description
1 **POWER**	Press to turn On and Off the TV.
2 **SLEEP**	Press repeatedly until the TV displays the time in minutes (Off, 15, 30, 60 or 120) that you want the TV to remain on before shutting off. To cancel **Sleep**, press SLEEP repeatedly until **Sleep Off** appears.
3 **DISPLAY**	Press once to display the current channel number, channel label, remaining time, **Wide Mode** settings and current time. The on screen display (OSD) will turn off after a few seconds.
4 **GUIDE** (For all channels including Digital/Analog channels)	Press to display the Guide when you are watching digital channels (if it is available from the station). **Using the Guide** The Guide allows you to select the channels from a channel list; also provides information about the current program being shown on each channel. • Program information in the guide is provided by the broadcasters. As a result, it may sometimes include only the channel number, without a program title or description.
5 **RETURN**	Press to go back to the previous screen when displaying **MENU** items and settings.
6 **TOOLS**	This function is only available when PC input is active. Press TOOLS to view a channel at the same time as a Picture in Picture (PIP) screen.
7 **MENU**	Press to display the **MENU** with TV functions and settings.
8 **JUMP**	Press to alternate between two channels. The TV will alternate between the current channel and the last channel tuned to with the buttons 0 - 9 and · on the remote control.

For more details regarding to remote control functions, please refer to the Operating Instructions manual.

HD Basic Connection

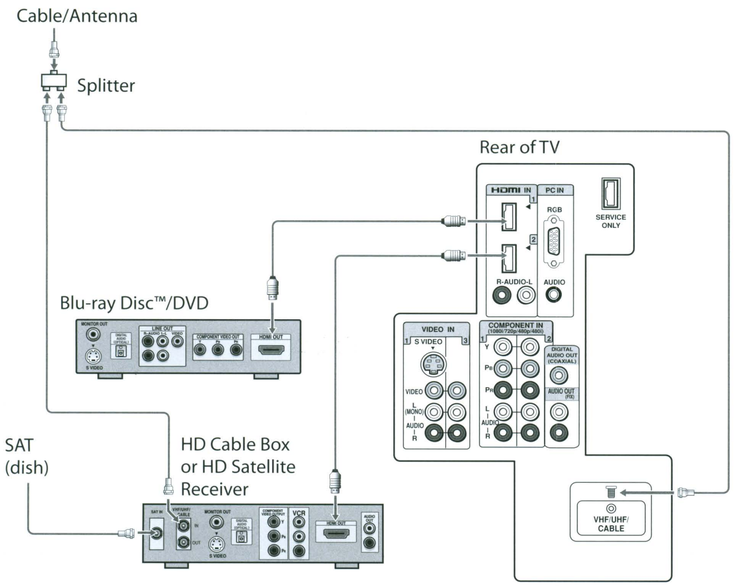

HD Basic Connection with A/V Receiver

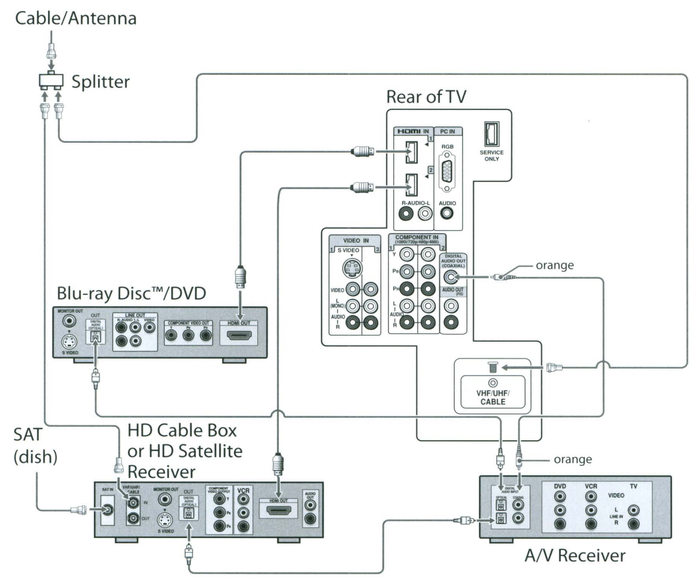

HD Basic Connection with Home Theater System

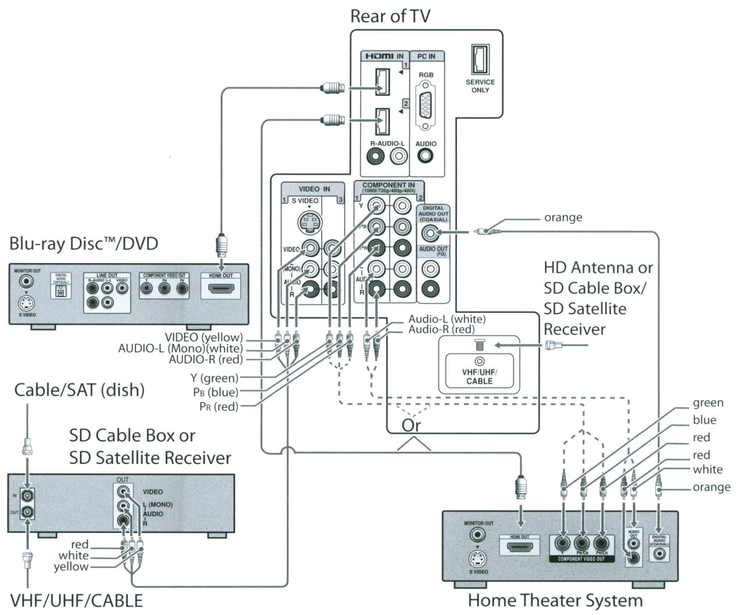

Required Cable Types for Connection

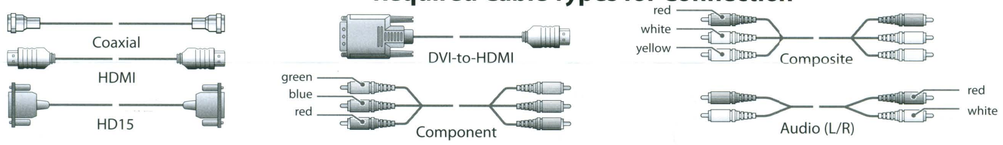

Notes on Connection:

- Your TV is equipped with two HDMI inputs, connect your incoming signal source (HD Cable Box, HD Satellite Receiver, or DVD) with an HDMI or component video for the best possible picture quality.
- If the equipment has a DVI and not a HDMI connector, use a HDMI to DVI cable or adapter to connect the DVI output to either HDMI IN 1 or HDMI IN 2 input, and connect the audio jacks to the AUDIO (L/R) jacks below the HDMI IN 2. (DVI connector is for video signals only. The Audio jacks provide support for the audio.)
- **PIP** function requires VHF/UHF/CABLE connection.
- When receiving High-Definition content signal by over-the-air antenna, it is best to use the HD antenna.
- When using a DVI-to-HDMI cable, make sure to connect the DVI side first.

Basic Connection with SD VCR/DVD

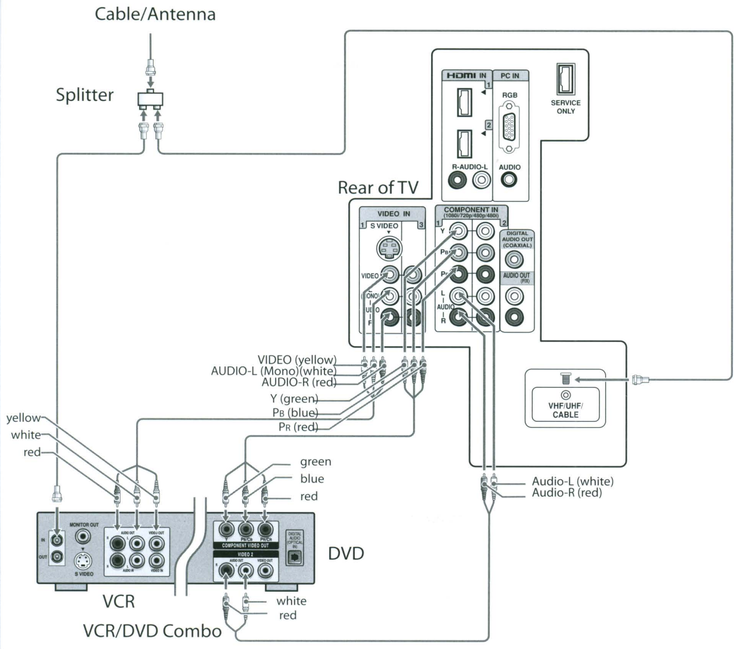

Notebook PC Connection

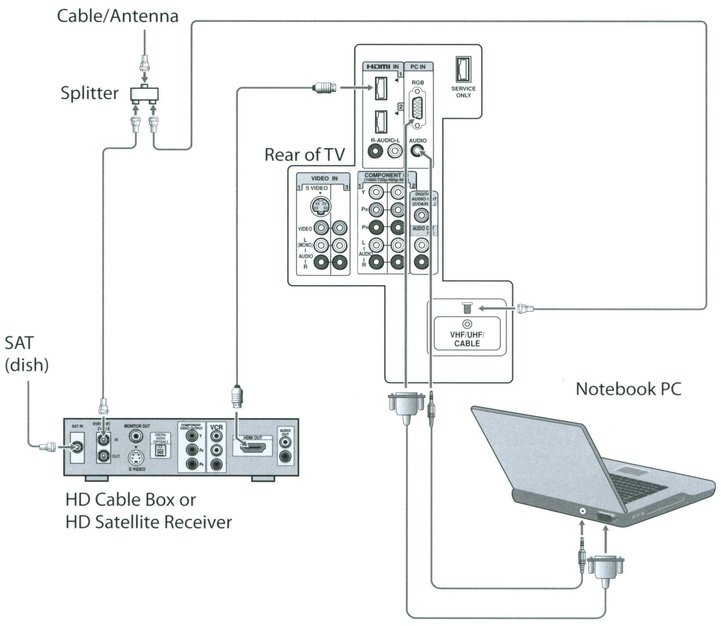

Desktop PC Connection

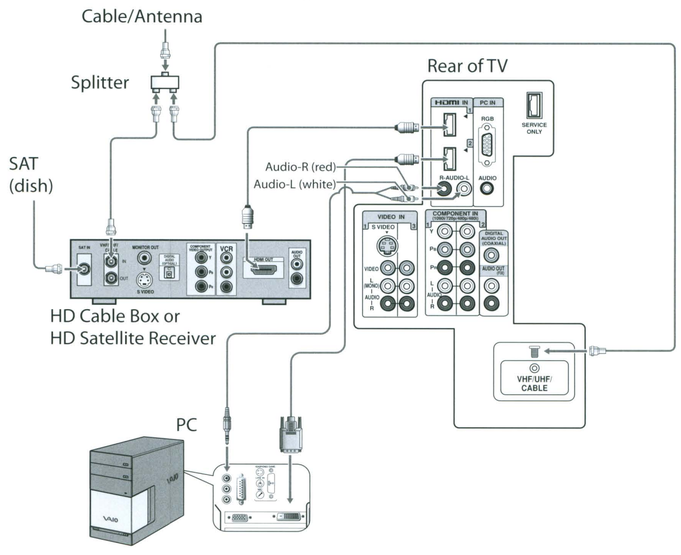

SONY

KDL-37M3000

English

Assemble the Table-Top Stand before setting up the TV.

The Table-Top Stand for this product is packaged separately. Install the TV unit to the Table-Top Stand before the connection and setup.

You will find the Table-Top Stand next to the TV unit.

CAUTION. Keep the screws away from small children.

1 Prepare the Table-Top Stand

Take out the Table-Top Stand from the cushion and the 4 screws from the accessory bag.

2 Place the Table-Top Stand on to a level and stable surface

3 Installation

Install the TV unit to the Table-Top Stand by aligning the two slotted sections on the bottom of the TV unit to the two metal necks of the Table-Top Stand.

When you carry the TV unit, place your hand as illustrated and hold it securely. Do not put stress on the LCD panel and the frame around the screen.

Be careful to not pinch your hands or the AC power cord when you install the TV unit to the Table-Top Stand.

4 Stabilize the TV unit and the Table-Top Stand with supplied 4 screws.

If you use an electric screw driver, set the torque for tightening at approximately 1.5 Nm (15kgf/cm).

Français

Assemblez le support de table avant de configurer le téléviseur

Le support de table pour ce produit est emballé séparément. Installez le téléviseur sur le support de table avant d'effectuer les connexions et la configuration.

Le support de table se trouve à côté du téléviseur.

ATTENTION. Maintenez les vis hors de la portée des jeunes enfants.

1 Préparez le support de table

Retirez le support de table du coussin et les quatre vis du sac d'accessories.

2 Placez le support de table sur une surface plane et stable.

3 Installation

Installez le téléviseur sur le support de table en alignant les deux parties avec fentes qui se trouve au-dessous du téléviseur sur les deux manches métaux du support de table.

Lorsque vous transportez le téléviseur, placez vos mains tel qu'illustré et tenez solidement l'appareil. N'appliquez pas de pression sur l'écran ACL ni sur le cadre autour de l'écran.

Veillez à ne pas pincer vos mains ou le cordon d' alimentation CA lorsque vous installez le téléviseur sur le support de table.

4 Stabilisez l'assemblage du téléviseur et du support de table avec les quatre vis fournies.

Si vous utilisez un tournevis électrique, réglez le couple de vissage à environ 1,5 Nm (15 kgf•cm).

Español

Instale el soporte de sobremesa antes de conectar el televisor.

El soporte de sobremesa de este producto está empacado por separado. Instale el televisor al soporte antes de conectarlo y establecer la configuración inicial.

El soporte de sobremesa se encuentra enseguida del televisor.

PRECAUCIÓN. Mantenga los tornillos fuera del alcance de niños pequeños.

1 Prepare el soporte de sobremesa

Retire el soporte de sobremesa del empaque que lo protege y saque los 4 tornillos de la bolsa de accesorios.

2 Coloque el soporte de sobremesa en una superficie plana y estable.

3 Instalación

Instale el televisor al soporte de sobremesa, alineando los dos orificios inferiores del televisor a los dos cuellos de metal del soporte de sobremesa.

Cuando cargue el televisor, coloque sus manos como en la ilustración y sosténgalo firmemente. No presione sobre la pantalla de cristal líquido ni sobre el marco que la rodea.

Tenga cuidado de no presionar sus manos o el cable de alimentación cuando instale el televisor al soporte de sobremesa.

4 Estabilice el televisor al soporte de sobremesa con los 4 tornillos incluidos.

Si utiliza un destornillador eléctrico, ajuste el torque para apretar en aproximadamente 1,5 Nm (15 kgf/cm).

1

2

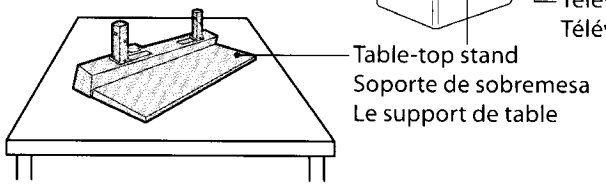

3

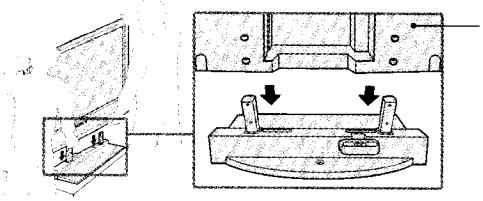

4

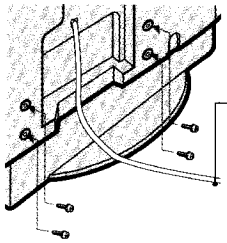

© 2007 Sony Corporation Printed in Mexico

3272371111

3-272-371-11(1)

SONY

KDL-32M3000
KDL-32ML130
KDL-37M3000

English

Installing the Wall-Mount Bracket

To Customers

For product protection and safety reasons, Sony strongly recommends that wall-mounting of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself. Your KDL-32M3000/KDL-32ML130/KDL-37M3000 can be wall-mounted using SU-WL500 Wall-Mount Bracket (sold separately). Please provide your licensed contractor with this installation supplement as well as the Instructions (supplied with the SU-WL500 Wall-Mount Bracket). Read these documents carefully for safety and proper installation.

To Sony Dealers and Contractors

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Français

Installation du support de fixation muralee

À l'attention des clients

Par souci de protection du produit et pour des raisons de sécurité, Sony recommande vivement que l'installation du support de fixation murale du téléviseur soit confiée à un revendeur Sony ou à un installateur agréé. Ne pas tenter d'effectuer l'installation soi-même. Le KDL-32M3000/KDL-32ML130/KDL-37M3000 peut être fixé au mur à l'aide du support de fixation murale SU-WL500(vendu séparément). Veuillez fournir à l'installateur agréé ce supplément ainsi que le mode d'emploi (accompagnant le support de fixation murale SU-WL500). Lire attentivement ces documents qui concernent la sécurité et l'installation correcte du support.

À l'intention des revendeurs Sony et des installateurs

Accorder une attention particulière à la sécurité lors de l'installation, de l'entretien périodique et de la vérification de ce produit.

Español

Instalación del soporte de montaje en pared

Para los clientes

Por razones de protección del producto y de seguridad, Sony recomienda que el montaje en pared del televisor sea realizado por un distribuidor o contratista autorizado de Sony. No intente instalarlo usted mismo.
Puede instalarse el modelo KDL-32M3000/KDL-32ML130/KDL-37M3000 en una pared mediante el soporte de montaje en pared SU-WL500 (se vende por separado). Muestre al contratista autorizado este suplemento para la instalación, así como las instrucciones (suministradas con el soporte de montaje en pared SU-WL500). Lea atentamente estos documentos para realizar la instalación correctamente y de manera segura.

Para distribuidores y contratistas de Sony

Ponga especial atención a la seguridad durante la instalación, mantenimiento periódico y comprobación de este producto.

© 2007 Sony Corporation

3-272-375-**11(1)**

English

Installation dimensions table*1

Français

Tableau des dimensions d'installation*1

Español

Tabla de las dimensiones de instalación*1

KDL-32M3000/KDL-32ML130/KDL-37M3000

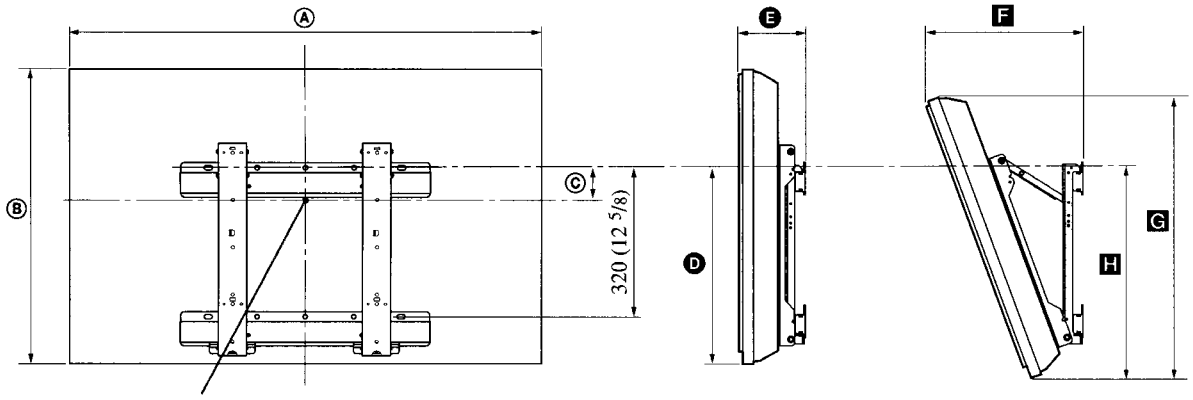

Center line of the screen when installed on the wall/
Ligne centrale de l'écran lorsqu'installé sur le mur/
Línea central de la pantalla cuando se instala en la pared

Unit: mm (inches)/ Unité : mm (pouces)/ Unidad: mm (pulgadas)	Display Dimensions/ Dimensions de l'écran/ Dimensiones de la pantalla		Screen center dimensions Dimension au centre de l'écran Dimensión del centro de la pantalla	Length for each mounting angle/ Longueur de chaque angle de montaje/ Longitud de cada ángulo de montaje					Weight/ Poids/ Peso	
TV model/ Modèle de téléviseur/ Modelo de televisor	Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	Ⓕ	Ⓖ	Ⓗ	TV w/o stand	(× 4)*2
KDL-32M3000 KDL-32ML130	796 (31 3/8)	544 (21 1/2)	137 (5 1/2)	438 (17 1/4)	160 (6 3/8)	317 (12 1/2)	526 (20 3/4)	470 (18 5/8)	14 kg (31 lb)	56 kg (124 lb)
KDL-37M3000	918 (36 1/4)	609 (24)	144 (5 3/4)	476 (18 3/4)	168 (6 5/8)	335 (13 1/4)	587 (23 1/8)	510 (20 1/8)	18.5 kg (41 lb)	74 kg (164 lb)

*1 Installation dimensions may differ according to how the display is installed./
*1 Les dimensions d'installation peuvent varier selon la façon dont l'écran est installé./
*1 Es posible que las dimensiones de instalación varíen en función de cómo se instale la pantalla.
*2 The wall must be strong enough to support at least four times the weight of the display that you are installing./
*2 Le mur doit être assez fort pour soutenir au moins quatre fois le poids de l'écran que vous installez./
*2 La pared debe ser suficientemente resistente para soportar como mínimo cuatro veces el peso de la pantalla que está instalando.

English

Installing the TV on a wall

The TV can be installed on a wall by attaching a Wall-Mount Bracket (sold separately).
Verify your TV's model number and be sure to use the bracket specified for your model only. Refer to the Steps on this leaflet along with the Instructions supplied with the SU-WL500 Wall-Mount Bracket, to properly carry out the installation.

Sufficient expertise is required in installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.

For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and that the wall-mounting of your TV is performed by Sony dealers or licensed contractors.

[redacted]

Open the Wall-Mount Bracket package and check the contents for all required parts along with the Instructions.

[redacted]

Decide where you want to install your TV. Please refer to the Installation Dimensions Table to help determine the best location.
Refer to the Instructions for the SU-WL500.

[redacted]

Refer to the Instructions for the SU-WL500.

[redacted]

Before detaching the Table-Top Stand, disconnect all the cables from the TV.
Refer to Operating Instructions supplied with the TV set for removing the Table-Top Stand.
For mounting hook installation, refer to the Sc**rew and Hook locations diagram/table** on the last page of this leaflet.

[redacted]

Refer to the Instructions for the SU-WL500.

Français

Fixation du téléviseur au mur

Le téléviseur peut être fixé au mur à l'aide du support de fixation murale (vendu séparément).
Vérifier la référence du modèle du téléviseur et s'assurer à utiliser uniquement le support spécifié pour ce modèle.
Consulter les étapes de ce dépliant ainsi que le mode d'emploi accompagnant le support de fixation murale SU-WL500 pour effectuer correctement l'installation.

Une certaine expertise est requise pour installer ce produit, notamment pour déterminer la résistance du mur par rapport au poids du téléviseur. S'assurer de confier la fixation de ce produit au mur à des revendeurs Sony ou à des installateurs agréés et d'être particulièrement vigilant en matière de sécurité au cours de l'installation. Sony ne peut être tenu responsable de tout dommage ou blessure résultant d'une manipulation ou d'une installation incorrecte.

Pour la protection du produit et des raisons de sécurité, Sony vous recommande fortement d'utiliser le modèle de support de montage murale conçu pour votre téléviseur et de faire installer votre téléviseur au mur par un concessionnaire Sony ou un entrepreneur autorisé.

[redacted]

Ouvrez l'emballage du support de fixation murale et vérifiez que toutes les pièces nécessaires sont présentes ainsi que les Instructions.

[redacted]

Décidez où vous désirez installer votre téléviseur. Veuillez vous reporter au Tableau des dimensions d'installation pour vous aider à déterminer le meilleur endroit.
Reportez-vous aux directives pour le SU-WL500.

[redacted]

Reportez-vous aux directives pour le SU-WL500.

[redacted]

Avant de détacher le support de table, débranchez tous les câbles du téléviseur.
Reportez-vous aux directives d'utilisation fournies avec le téléviseur pour retirer le support de table.
Pour l'installation du crochet de montage, reportez-vous au **diagramme/tableau des emplacements de vis et de crochet** situé à la dernière page de ce livret.

[redacted]

Reportez-vous aux directives pour le SU-WL500.

Español

Instalación del televisor en una pared

Puede instalar el televisor en una pared sujetándolo con el soporte de montaje en pared (se vende por separado).
Compruebe el número de modelo del televisor y asegúrese de utilizar solamente el soporte especificado para dicho modelo.
Consulte los pasos de este folleto, junto con el manual de instrucciones suministrado con el soporte de montaje en pared SU-WL500, para realizar la instalación correctamente.

Se requiere bastante experiencia para instalar este producto, especialmente para determinar la resistencia de la pared para soportar el peso del televisor. Asegúrese de contratar la instalación de este producto a la pared a un distribuidor o contratista autorizado de Sony y de prestar especial atención a la seguridad durante la instalación. Sony no se hace responsable de los daños materiales o personales provocados por una manipulación o instalación incorrecta.

Para la protección y seguridad del producto, Sony recomienda usar sólo el modelo de soporte de montaje en pared designado para su televisor y que la instalación del soporte de montaje en pared sólo la haga un distribuidor o contratista autorizado de Sony.

[redacted]

Abra el empaque del soporte de montaje en pared y compruebe que contiene todas las piezas necesarias, junto con el manual de instrucciones.

[redacted]

Decida dónde desea instalar el televisor. Por favor consulte la Tabla de Dimensiones de Instalación para ayudar a determinar la mejor ubicación.
Consulte el manual de instrucciones del soporte de montaje en pared SU-WL500.

[redacted]

Consulte el manual de instrucciones del soporte de montaje en pared SU-WL500.

[redacted]

Antes de retirar el soporte de sobremesa, desconecte todos los cables del televisor.
Consulte el Manual de instrucciones incluido con el televisor para retirar el soporte de sobremesa.
Para la instalación de los ganchos, consulte la "**Tabla de diagrama de las ubicaciones de los ganchos y los tornillos**" en la última página de este instructivo.

[redacted]

Consulte el manual de instrucciones del soporte de montaje en pared SU-WL500.

TV Model/ Modèle de téléviseur/ Modelo de televisor	Screw Location/ Emplacement des vis/ Ubicación de los tornillos	Hook Location/ Emplacement du crochet/ Ubicación de los ganchos
KDL-32M3000	f,j	c
KDL-32ML130		
KDL-37M3000	f,j	b

When installing the Mounting Hook on the TV.
En cas d'installation du crochet de fixation sur le téléviseur.
Al instalar el gancho de montaje en el televisor.

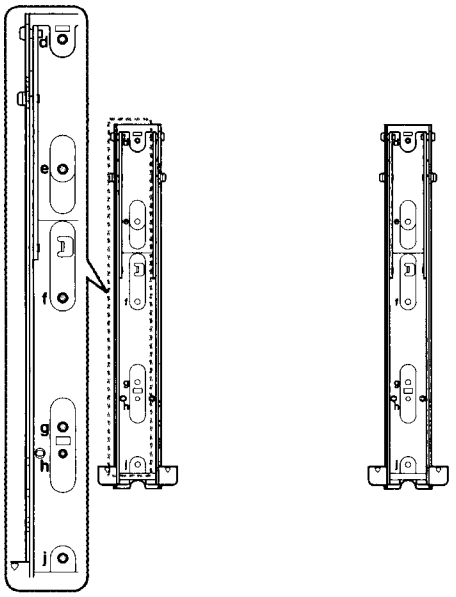

When installing the TV onto Base Bracket.
En cas d'installation du téléviseur sur le support de fixation de la base.
Al instalar el televisor en el soporte base.

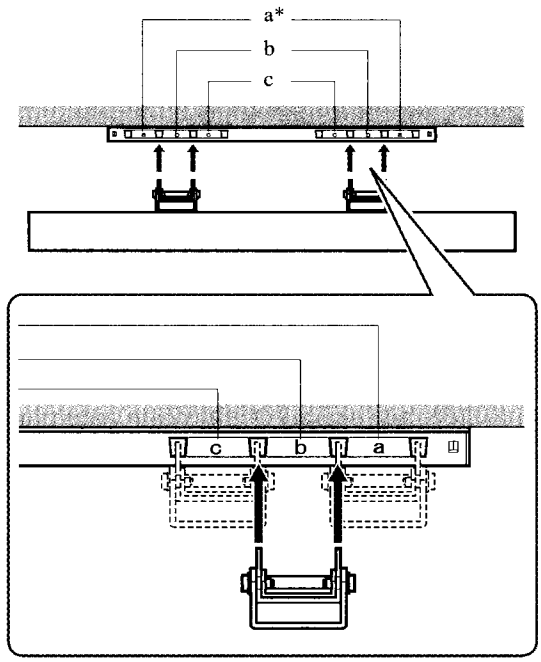

* Hook position "a" cannot be used for the models in the table above.
* La position du crochet « a » ne peut pas être utilisée pour les modèles repris dans le tableau ci-dessus.
* La posición del gancho "a" no se puede utilizar para los modelos de la tabla anterior.

Printed in Mexico

3272375111

NOTICES AND LICENSES FOR SOFTWARE USED IN THIS TELEVISION

GPL/LGPL LICENSED SOFTWARE

The following GPL executables and LGPL libraries are used in this product and are subject to the GPL/ LGPL License Agreements included as part of this documentation:

GPL Executable:
AMD GTX2.0 tool-chain Linux Kernel
Busybox
insmod
pmon

LGPL Libraries:
glibc
gcc

Source code for these executables and libraries can be obtained using the following link:
http://www.sony.com/linux

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.
It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.> Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it; under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

GNU LESSER GENERAL PUBLIC LICENSE
Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library.

b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.

c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990
Ty Coon, President of Vice

INDEPENDENT JPEG GROUP SOFTWARE

The module, libjpeg.so is the work of the Independent JPEG Group. © copyright 1991 - 1998, Thomas G. Lane. All rights reserved.

SOFTWARE DEVELOPED BY THE OPENSSL PROJECT FOR USE IN THE SSL TOOLKIT

Copyright (c) 1998-2004 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.
This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).
The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:" This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related:-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:" This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

FREETYPE2 SOFTWARE

Portions of this software are copyrighted © 1996-2002. The FreeType Project (www.freetype.org). All rights reserved.

THE FREETYPE PROJECT IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ANY OF THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY DAMAGES CAUSED BY THE USE OR THE INABILITY TO USE, THE FREETYPE PROJECT.

EXPAT SOFTWARE

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper
Copyright (c) 2001, 2002, 2003 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

CURL SOFTWARE

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2006, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

Printed in Mexico

4-103-056-02(1)
4103056021

SONY®

LCD Television

LIMITED WARRANTY(US ONLY)

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, SONY will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

Term: For a period of one (1) year from the original date of purchase of the product (or a period of ninety (90) days for commercial use), SONY will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: In-home diagnostic warranty service is provided during the one (1) year limited warranty term (ninety (90) days for commercial use) for thirty (30) inch (measured diagonally) or larger screen size television products through a SONY-authorized service facility. Otherwise, to obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the SONY authorized service facility specified. A dated purchase receipt or bill of sale is required. For specific instructions on how to obtain warranty service for your product,

Visit SONY's Web Site:
www.sony.com/support

Or call the Sony Customer Information Service Center

1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of SONY.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to, product issues due to (i) acts of God, (ii) misuse, (iii) customer instruction, installation, set up adjustments or signal reception issues; (iv) limitations of technology, or (v) modification of or to any part of the SONY product, include the antenna. This Limited Warranty does not cover SONY products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

Printed in U.S.A.